


Service Manual

Microwave Oven

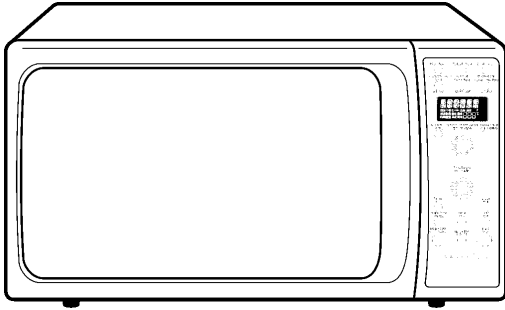

NN-C2000P
NN-C2000W

Specifications

| | | |
|--|-----------|--|
| Power Source: | | 240 V AC Single Phase, 50 Hz For QPQ, KNQ, MNQ, YNQ models 230 V AC Single Phase, 50 Hz For JPG model 220 V AC Single Phase, 50 Hz For HNE, TNE, KKE models 220-230 V AC Single Phase, 60 Hz For LNK model 220 V AC Single Phase, 50/60 Hz For SNM model |
| Power Requirement: | Microwave | 1,220 W |
| | Heater | 1,800 W |
| Output: | Microwave | 1,000 W: Full Power (IEC 705-88) |
| | Heater | 1,760 W |
| Microwave Frequency: | | 2,450 MHz |
| Timer: | | 99 min. 99 sec. / 9 hr. 99 min. |
| Outside Dimensions: | | 376 mm (H) X 611 mm (W) X 490 mm (D) |
| Oven Cavity Dimensions: | | 242 mm (H) X 412 mm (W) X 426 mm (D) |
| Weight: | | Approx. 21 kg |
| Specifications subject to change without notice. | | |

National/Panasonic

© 2000 Matsushita Electric Industrial Co., Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

WARNING

* This product should be serviced only by trained, qualified personnel. This service manual covers products for following markets. When troubleshooting or replacing parts, please refer to the country identifications shown below for your applicable product specification.

- | | | | |
|-----------|--|-----------|-------------------------|
| YNQ | For Singapore | KKE | For U.A.E, Egypt, Iran |
| KNQ | For Kuwait, Doha Qatar, Oman, Bahrain, Pakistan | TNE | For Thailand, Indonesia |
| MNQ | For Malaysia | LNK | For Philippines |
| QPQ | For Australia | JPG | For New Zealand |
| HNE | For Hong Kong | SNM | For Saudi Arabia |

DANGER OF HIGH VOLTAGE AND HIGH TEMPERATURE (HOT/LIVE) OF THE INVERTER POWER SUPPLY (U)

INVERTER WARNING

NEW H.V.



DANGER HIGH VOLTAGE


This Inverter board looks like a regular PCB; However, this PCB drives the magnetron tube with extremely high voltage and high current.

IT HAS: 1. Very high voltage and high current circuit.


- It functions the same as the high voltage transformer and high voltage capacitor in ordinary microwave ovens.
- 2. Aluminum heat sink is very hot in high voltages and heat energy.
- 3. Very high voltage may remain in circuitry even when oven is off. High voltages may remain in the capacitors on the board.

DO NOT: * 1. Do not touch circuitry because it has very hot (high voltage) circuitry. Even when replacing board, extreme care should be taken to avoid possible electric shock hazards. High voltage may remain in circuit.

- * 2. Do not touch aluminum heat sink because it is very hot in high voltage and also very hot in high heat energy.
- * 3. Do not try to adjust or tamper preset volume on the Inverter board because it is very dangerous to adjust without proper test equipment.
- * 4. Do not test oven while Inverter grounding strip or screws are loose. It is very dangerous to operate the H.V.Inverter Circuit (U) with loose mounting screws or if improperly grounded.

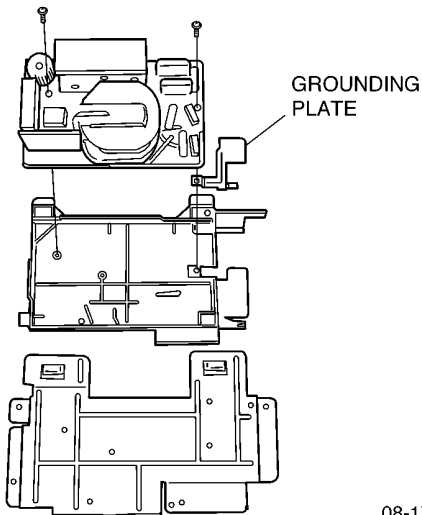

INVERTER POWER SUPPLY DIAGRAM

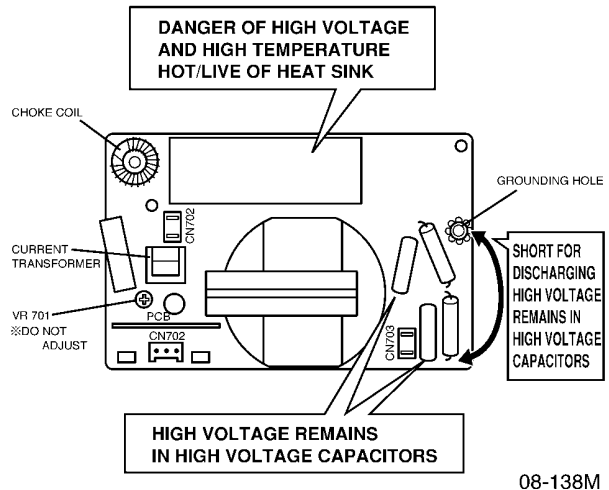

CONTENTS


| | Page | | Page |
|-----------------------|------|---|------|
| 1 FEATURE CHART | 4 | 3 OPERATION AND DIGITAL PROGRAMMER CIRCUIT TEST | |
| 2 CONTROL PANEL | 5 | PROCEDURE | 6 |

| | | | |
|--|----|---|----|
| 4 SCHEMATIC DIAGRAM (FOR QPQ, JPG) | 7 | 13 EXPLODED VIEW AND PARTS LIST | 30 |
| 5 SCHEMATIC DIAGRAM (FOR MNQ, YNQ, TNE, LNK, SNM, KNQ, KKE) | 8 | 14 PARTS LIST | 31 |
| 6 DESCRIPTION OF OPERATING SEQUENCE | 9 | 15 DOOR ASSEMBLY | 33 |
| 7 CAUTIONS TO BE OBSERVED WHEN TROUBLESHOOTING | 12 | 16 ESCUTCHEON BASE ASSEMBLY | 34 |
| 8 DISASSEMBLY AND PARTS REPLACEMENT PROCEDURE | 14 | 17 PACKING AND ACCESORIES | 35 |
| 9 COMPONENT TEST PROCEDURE | 18 | 18 WIRING MATERIAL | 36 |
| 10 MEASUREMENTS AND ADJUSTMENTS | 21 | 19 REF. NO. 47 H. V. INVERTER (U) | 37 |
| 11 TROUBLESHOOTING GUIDE (NEW H.V.) | 22 | 20 REF NO. E2 P. C. BOARD D (U) | 37 |
| 12 HOW TO CHECK THE SEMICONDUCTORS USING AN OHM METER | 29 | 21 REF NO. E3 P. C. BOARD F (U) | 38 |
| | | 22 DIGITAL PROGRAMMER CIRCUIT | 40 |
| | | 23 INVERTER CIRCUIT | 42 |

1 FEATURE CHART


| FEATURE | |
|------------------------|---|
| Three Stage Cooking | × |
| Sensor Reheat | × |
| Auto Cooking | × |
| Turbo Defrost | × |
| Convection | × |
| Combination | × |
| Grill | × |
| Child Safety Lock | × |
| Word Prompting Display | × |
| Timer/Stand Time | × |
| Digital Clock | × |

2 CONTROL PANEL

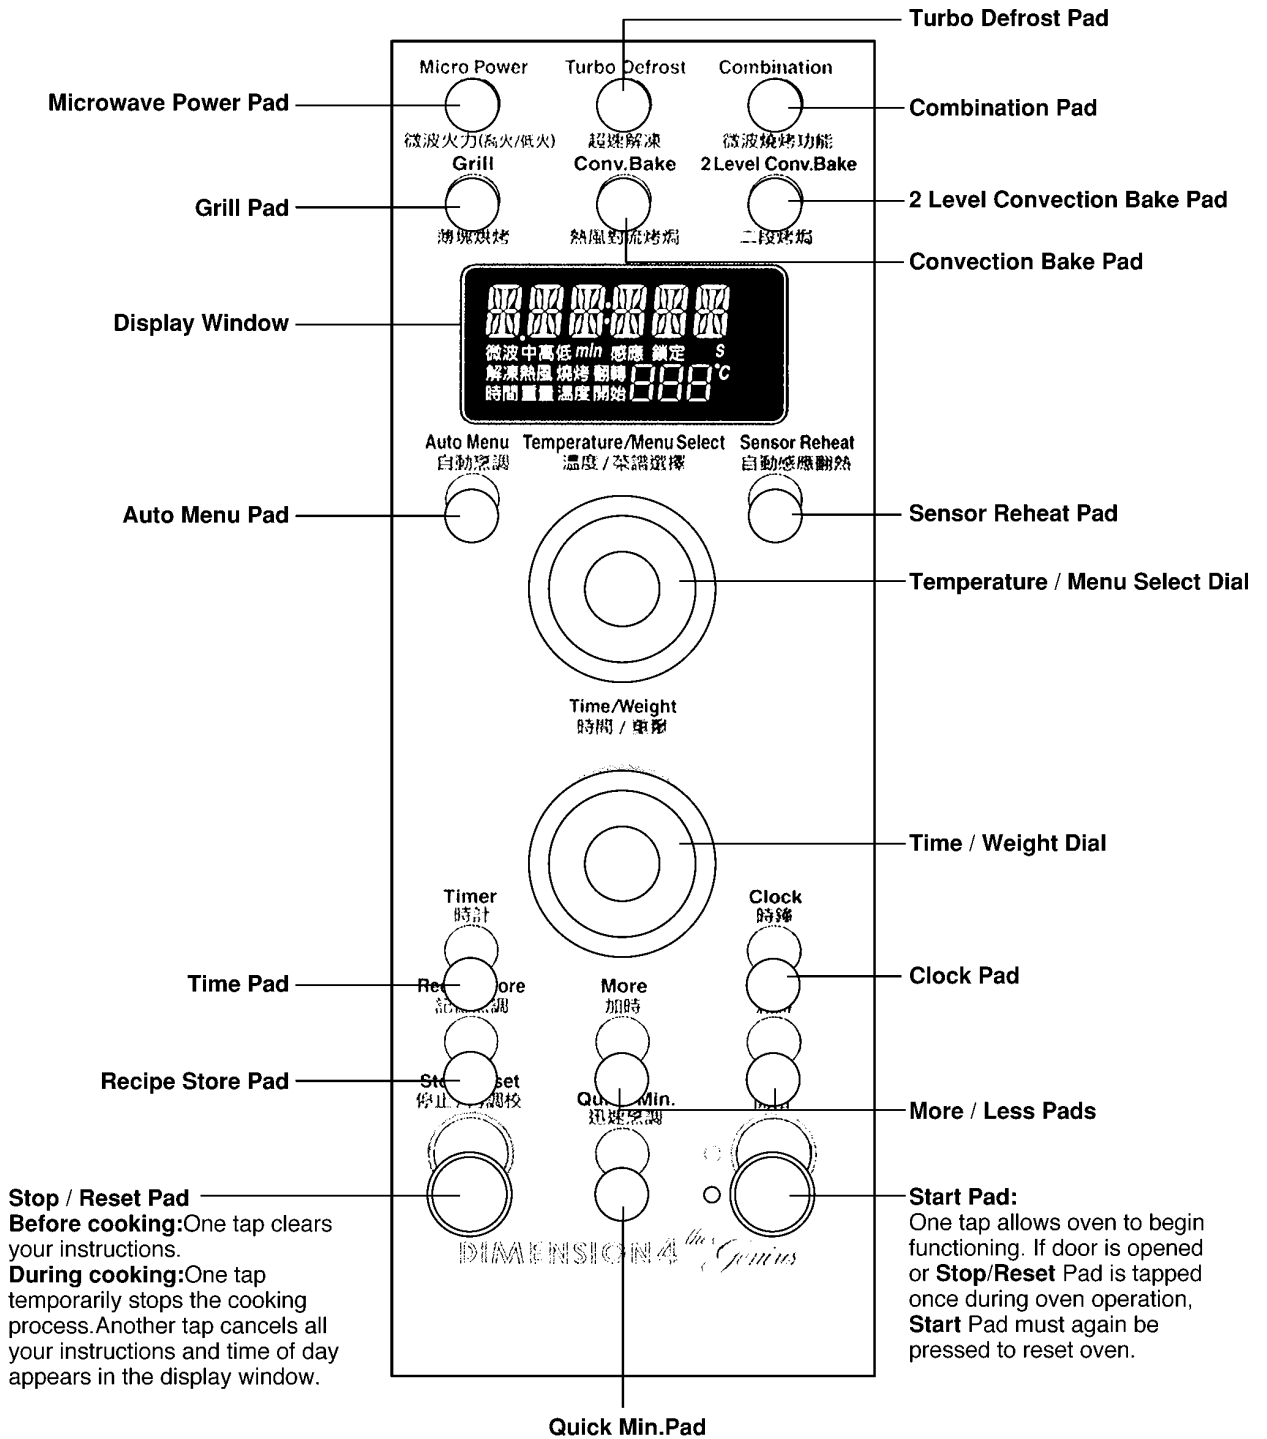



3 OPERATION AND DIGITAL PROGRAMMER CIRCUIT TEST PROCEDURE


1. To Set Clock

| OPERATION | SCROLL DISPLAY |
|---|---|
| 1. Plug the power supply cord into wall outlet. | WELCOME TO INVERTER COOKING |
| 2. Press Clock pad. |  --SET TIME |
| 3. Enter tim of day (TOD) by Turning Time/Weight Knob. | 11:25 --PRESS CLOCK |
| 4. Press Clock pad. TOD has now been registered into the digital programmer circuit and will count up by minutes. | 11:25 |



2. Time Cooking for Two Stage

| OPERATION | SCROLL DISPLAY |
|---|---|
| 1. Place a water load in the oven. | |
| 2. Press Micro Power button once to set High power. (1st stage) | HIGH --SET TIME |
| 3. Set for 10 seconds by Turning time knob. | 10 SEC --PRESS START HIGH |
| 4. Press Micro Power button 4 times to set Medium power. (2nd stage) | MEDIUM --SET TIME |
| 5. Set for 1 minute by Turning time knob. | 1 00 MIN SEC --PRESS START MEDIUM |
| 6. Press Start button. |  10 SEC |
| 7. When 1st stage cooking time has elapsed, oven automatically switches to 2nd stage cooking. |  1 00 MIN SEC |
| 8. When 2nd stage cooking time has elapsed, oven beeps 5 times and shuts off. | ENJOY YOUR MEAL Time of day or colon appears in the display. |


3. Turbo Defrost

| OPERATION | SCROLL DISPLAY |
|--|--|
| 1. Press Turbo Defrost pad. | TURBO DEFROST --SET WEIGHT |
| 2. Set the weight for 3 kg by Turning weight knob. | 3.0kg --PRESS START |
| 3. Press Start button. |  45 52 MIN SEC |

4. Convection Cooking with Preheat






| OPERATION | SCROLL DISPLAY |
|--|---|
| 1. Press Convection button. | |
| 1-2. Set 110°C by Turning temp knob. | 110C --PRESS START |
| 2. Press Start button. |  CONV P |
| 3. When preheating is completed, oven beeps 3 times. | CONV --PREHEAT END-- |
| 4. After completion of preheating, be sure to open the door. | 110C --SET TIME |
| 5. Close the door and set convection cooking time for 2 minutes. | 2 00 MIN SEC --PRESS START 110C |
| 6. Press Start button. |  CONV 2 00 MIN SEC |

4 SCHEMATIC DIAGRAM (FOR QPQ, JPG)

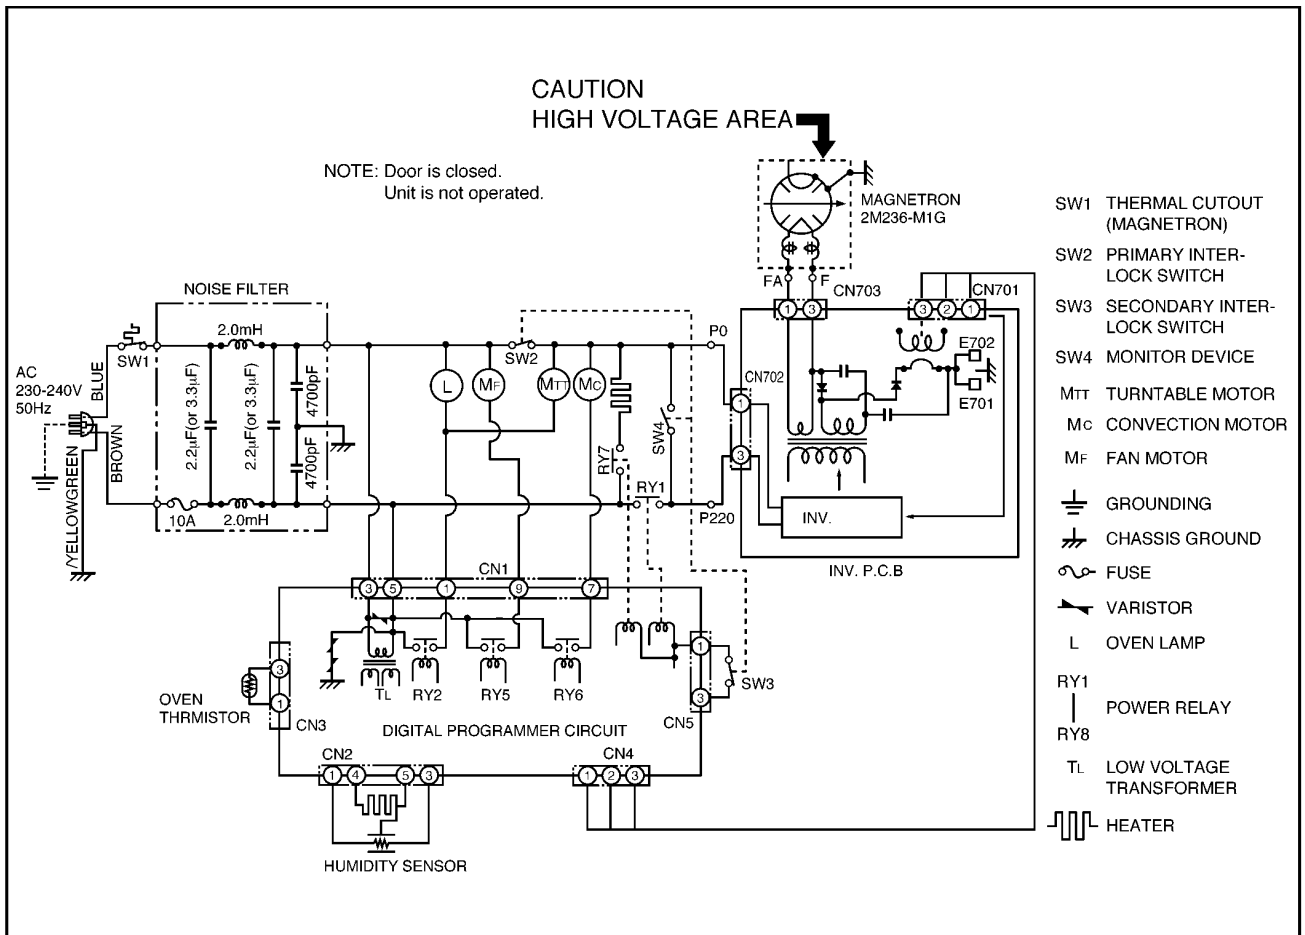

WIRING DIAGRAM

NOTE: *When replacing, check the lead wire colour as shown.
*Colours shown by () indicate colours of lead wire connector housing.

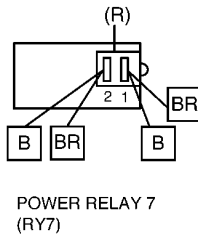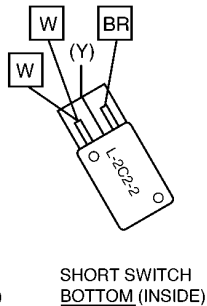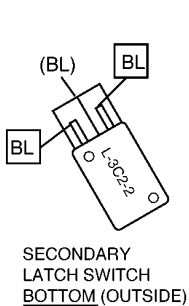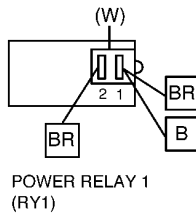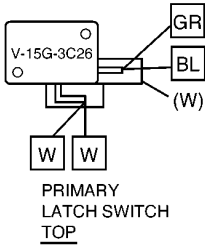


| SYMBOL | COLOUR |
|--------|--------|
| OR | ORANGE |
| BL | BLUE |
| BR | BROWN |
| W | WHITE |
| Y | YELLOW |
| R | RED |
| GR | GRAY |
| B | BLACK |

S-4X7 QPQ
M107

5 SCHEMATIC DIAGRAM (FOR MNQ, YNQ, TNE, LNK, SNM, KNQ, KKE)

**CAUTION
HIGH VOLTAGE AREA**






NOTE: Door is closed.
Unit is not operated.

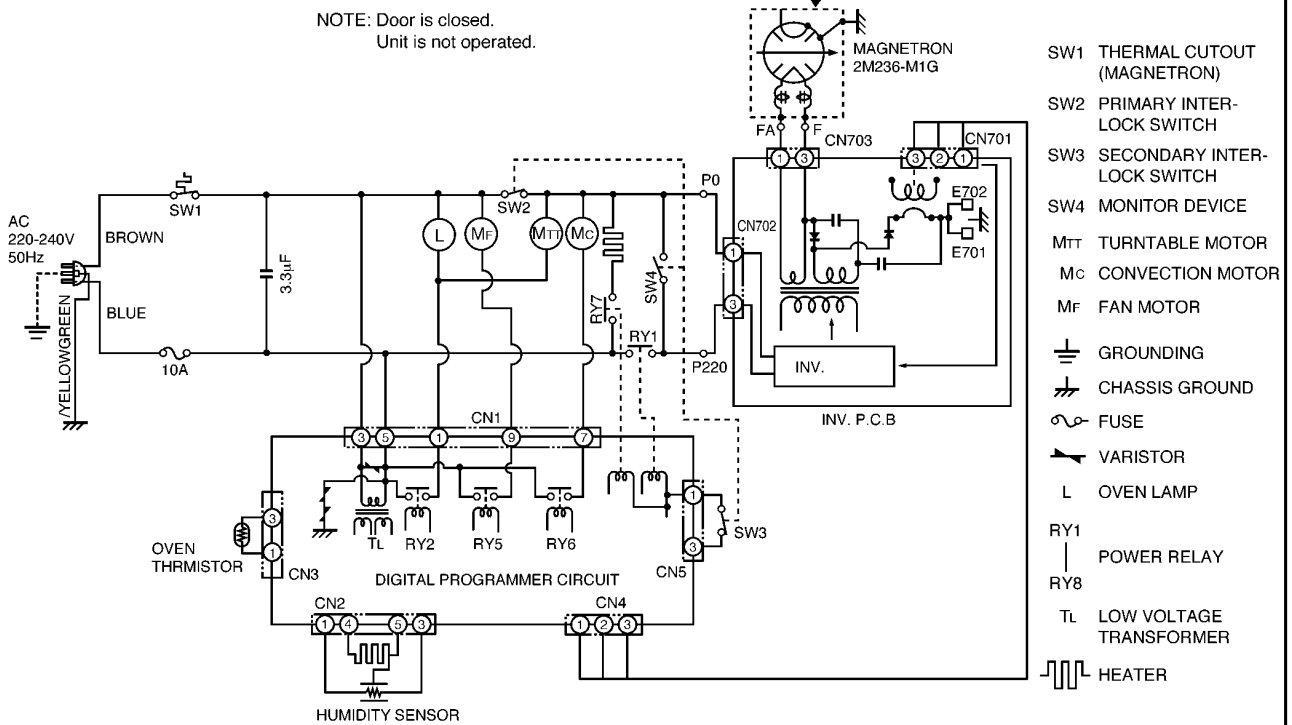

- SW1 THERMAL CUTOUT (MAGNETRON)
- SW2 PRIMARY INTER-LOCK SWITCH
- SW3 SECONDARY INTER-LOCK SWITCH
- SW4 MONITOR DEVICE
- MTT TURNTABLE MOTOR
- Mc CONVECTION MOTOR
- MF FAN MOTOR
- ⏏ GROUNDING
- ⏏ CHASSIS GROUND
- ⏏ FUSE
- ⏏ VARISTOR
- L OVEN LAMP
- RY1 POWER RELAY
- RY8
- TL LOW VOLTAGE TRANSFORMER
- HEATER

WIRING DIAGRAM

NOTE: *When replacing, check the lead wire colour as shown.
*Colours shown by () indicate colours of lead wire connector housing.

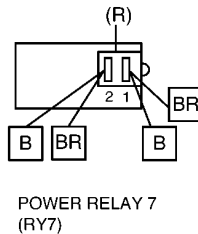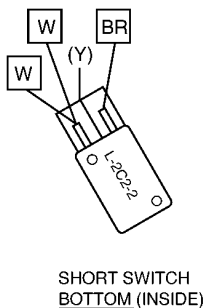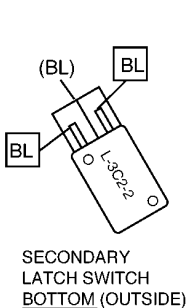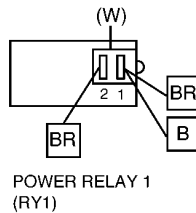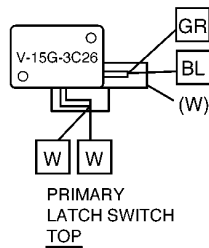

| SYMBOL | COLOUR |
|--------|--------|
| OR | ORANGE |
| BL | BLUE |
| BR | BROWN |
| W | WHITE |
| Y | YELLOW |
| R | RED |
| GR | GRAY |
| B | BLACK |

S-4X7 QPQ
M108

6 DESCRIPTION OF OPERATING SEQUENCE

6.1. Variable power cooking control

HIGH VOLTAGE INVERTER POWER SUPPLY (U) controls output power by the signal from Digital Programmer Circuit (DPC). Power relay 1 stays on but the inverter drive signal to control it's output power.

NOTE: The ON/OFF time ratio does not correspond with the percentage of microwave power since approximately 2 seconds are required for heating of magnetron filament.

6.2. Turbo weight defrost

When auto weight defrost is selected and the Start Pad is tapped:

1. The digital programmer circuit determines the power level and cooking time to complete cooking and indicates the operating state in the display window. Table shows the corresponding cooking times for respective serving by categories.
2. When cooking time in the display window has elapsed, the oven turns off automatically by a control signal from the digital programmer circuit.

6.3. Convection/Grill cooking control

The digital programmer circuit controls the ON-OFF time of the heater in order to control oven cavity temperature.


1. After the start pad is tapped with the desired Bake/Broil program set, an 18V DC signal comes out of the digital programmer circuit and is applied to coil of power relay 7 (RY7).
2. When the contacts of power relay 7 close, power source voltage is applied to the heater and the heater turns on.
3. When the oven temperature reaches the set temperature, the digital programmer circuit senses the temperature through oven temp sensor and stops supplying an 18V DC signal to the coil of power relay 7 and the heater turns off.
4. After the heater turns off, the oven temperature will continue increasing a while and then decrease as shown in Figure. When the oven temperature drops below the set temperature, the digital programmer circuit senses the signal and starts supplying an 18V DC signal to the coil of power relay again.

NOTE: When Broil feature is selected, oven temperature is determined automatically as shown in Figure.

| POWER SETTING | ON-OFF TIME OF POWER RELAY 1 (RY1) | |
|---------------|------------------------------------|-----------|
| | ON (SEC) | OFF (SEC) |
| HIGH | 22 | 0 |
| MEDIUM-HIGH | 22 | 0 |
| MEDIUM | 22 | 0 |
| MEDIUM-LOW | 16 | 6 |
| LOW | 9 | 13 |
| DEFROST | 16 | 6 |

Auto Weight Defrost

| WEIGHT SELECTED | TOTAL DEFROSTING TIME |
|-----------------|-----------------------|
| 1.0 kg | 14 min. 37 sec. |
| 2.0 kg | 30 min. 14 sec. |

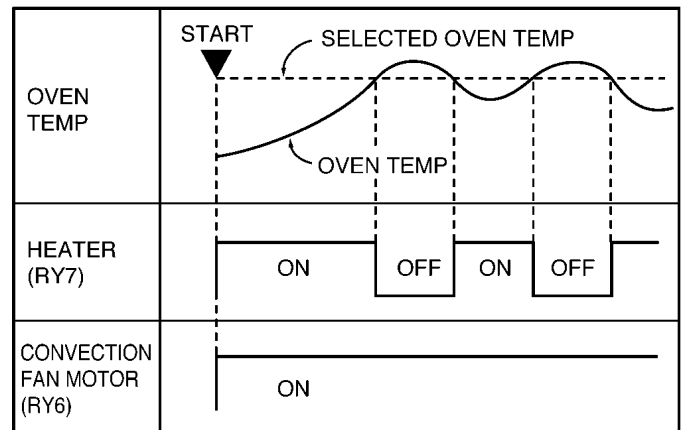

96-017M

6.4. Combination cooking control

Combination cooking is accomplished by microwave and convection cooking being done alternately during one combination cooking cycle. One combination cooking cycle is 22 seconds.

1. During combination cooking, the digital programmer circuit controls ON-OFF time of both power relay 1 and 7 as shown in Figure.
2. When the power relay 1 (RY1) is turned on, heater turns off and after the power relay 1 turns off, power relay 7 turns on.


NOTE 1: Note that the heater may not be on during a heater on period if the preprogrammed oven temperature has been reached. This is due to the fact that the oven is keeping the preprogrammed oven temperature constant, so of course the heater will only be on when it is needed and off when it is not needed.

NOTE 2: As for temperatures of combination cooking for

convection, the temperatures by each program are preprogrammed in the microprocessor as shown in Figure.

Combination Cooking

| CATEGORY | MICROWAVE | OVEN TEMP |
|----------|-----------|-----------|
| 1 | 6/16 SEC | 150°C |
| 2 | 6/16 SEC | 160°C |
| 3 | 6/16 SEC | 170°C |
| 6 | 6/16 SEC | 230°C |

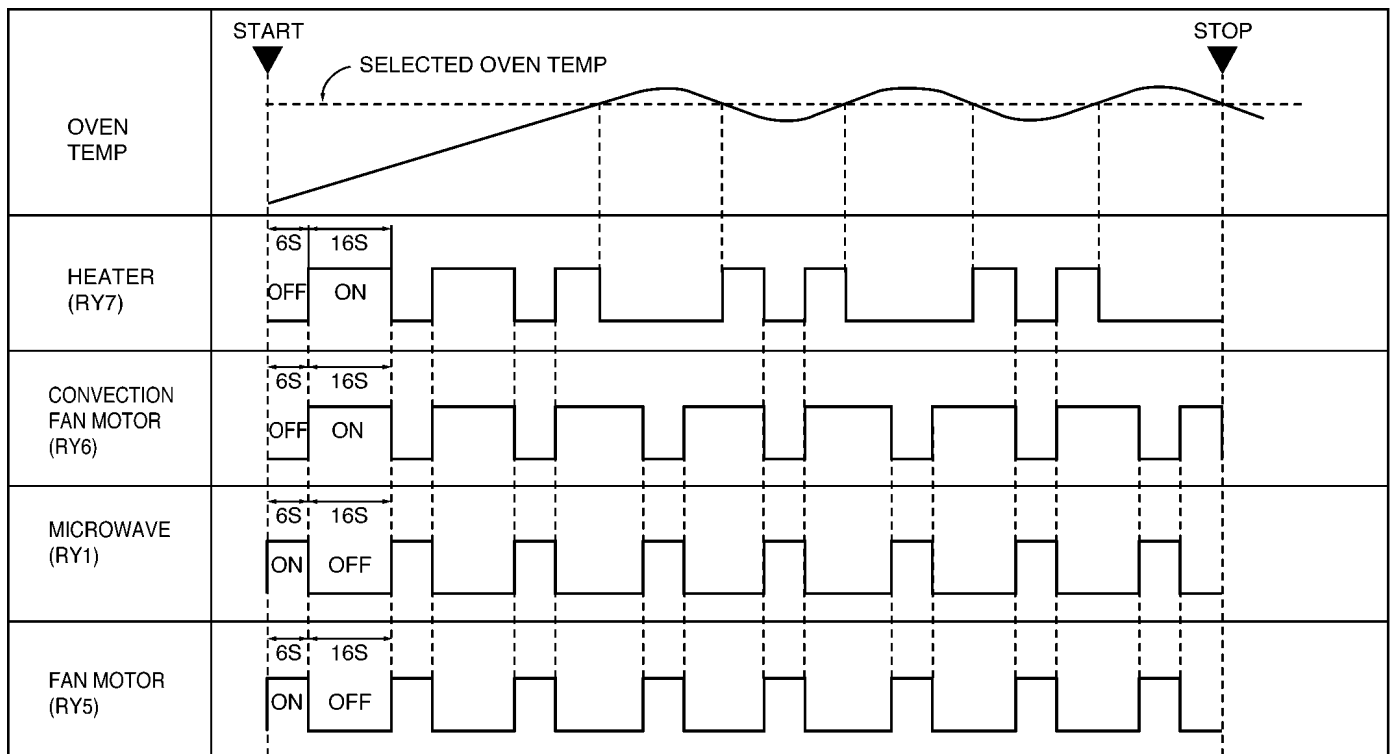

96-028M

6.5. One touch Auto sensor cooking

Auto sensor cooking is a revolutionary way to cook by microwave without setting a power level or selecting a time. All that is necessary is to select an Auto sensor Program before starting to cook.

Understanding of Cooking

As food cooks, a certain amount of steam is produced. If the food is covered, this steam builds up and eventually escapes from the container. In Auto Sensor Cooking, carefully designed instrument, called the humidity sensor element, senses this escape of steam. Then, based upon the Auto Sensor Program selected, the unit will automatically determine the correct power level and the proper length of time it will take to cook the food.

NOTE: Auto Sensor Cooking is successful with the foods and recipes found in the Auto Sensor Cooking Guide.

Because of the vast differences in food composition, items not mentioned in the Cooking Guide should be prepared in the microwave oven using power select and time features. Please consult Variable Power Microwave Cookbook for procedures.

Explanation of the Auto Sensor Cooking process

- 1) The shaded columns in Figure indicate when the humidity sensor heater is on.
- 2) During the 30 second period there is no microwave activity. When calculating the T2 time by using the formula below, make sure this 30 seconds is subtracted from the T0 time.
- 3) T1 time To time - 30 seconds
- 4) T2 time When the steam escapes from the cooking container placed in the oven, the humidity sensor detects it and the microprocessor calculates the balance of cooking time. This T2 time is then shown in the display and begins counting down.

Balance of cooking time (T2 time)

The balance of cooking time which is called T2 time, can be calculated by the following formula.

$$T2 \text{ time (in sec.)} = T1 \text{ time} \times K \text{ factor}$$

NOTE: Remember, the T1 time starts after the Start pad is tapped. The coefficient K is programmed into the microprocessor memory and they are listed in the following tables along with the P1 and P2 powers.

NOTE: When "More" or "Less" pad is selected, the K factor varies resulting in T2 time to be increased or decreased.

NOTE: For T2 time of Category Casserole, HEATER operation programmed.

Example of calculating the T2 time

Example 1: If the T1 time is measured to be 2 minutes and 40 seconds, and the Auto Sensor program selected is Sensor Reheat.

$$\begin{aligned}
 T2 &= T1 \times K \\
 &= 2 \text{ min. and } 40 \text{ sec.} \times 0.3 \\
 &= 48 \text{ sec.}
 \end{aligned}$$

Auto Sensor Cook

| Category | P1 Power | P2 Power | K factor Standard |
|-------------------|----------|----------|-------------------|
| Sensor Reheat | HIGH | M. HIGH | 0.3 |
| Steam Frozen Food | M. HIGH | LOW | 0.1 |
| Double Boil | M. HIGH | LOW | 3.0 |

7 CAUTIONS TO BE OBSERVED WHEN TROUBLESHOOTING

Unlike many other appliances, the microwave oven is high-voltage, high-current equipment. Though it is free from danger in ordinary use, extreme care should be taken during repair.

CAUTION

Servicemen should remove their watches whenever working close to or replacing the magnetron.

7.1. Check the grounding

Do not operate on a 2-wire extension cord. The microwave oven is designed to be used when grounded. It is imperative, therefore, to make sure it is grounded properly before beginning repair work.

7.2. Inverter Warnings (NEW H.V.)

DANGER OF HIGH VOLTAGE AND HIGH TEMPERATURE (HOT/LIVE) OF THE INVERTER POWER SUPPLY (U)

This High Voltage Inverter Power Supply circuit handles very high voltage and very high current for the magnetron tube. Though it is free from danger in ordinary use, extreme care should be taken during repair. As you can see, it looks like a TV flyback transformer, however the current is extremely large and so danger exists by its high current and high voltages.



The aluminum heat sink is also energized with high voltage (HOT), so do not touch when AC input terminal is connected to the power line because one of the IGBT switching power devices (Collector) is directly connected to the Aluminum heat sink.

The Aluminum heat sink may be HOT by heat energy; therefore, extreme care should be taken during servicing and replacing.

WARNING OF DISCHARGING HIGH VOLTAGE CAPACITORS

Warning about the electric charge in the high voltage capacitors. For about 30 seconds after the oven is turned off, an electric charge remains in the high voltage capacitors in the inverter power supply circuit board.

When replacing or checking parts, remove the power plug from the outlet and remove air guide cover then short the Inverter high voltage diode terminal to the chassis ground with an insulated handle screwdriver to discharge. Please make sure to touch chassis ground side first then short to the output terminals.

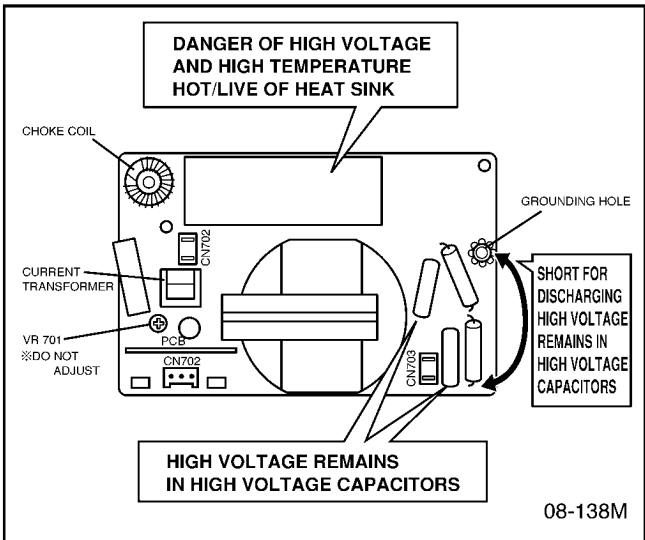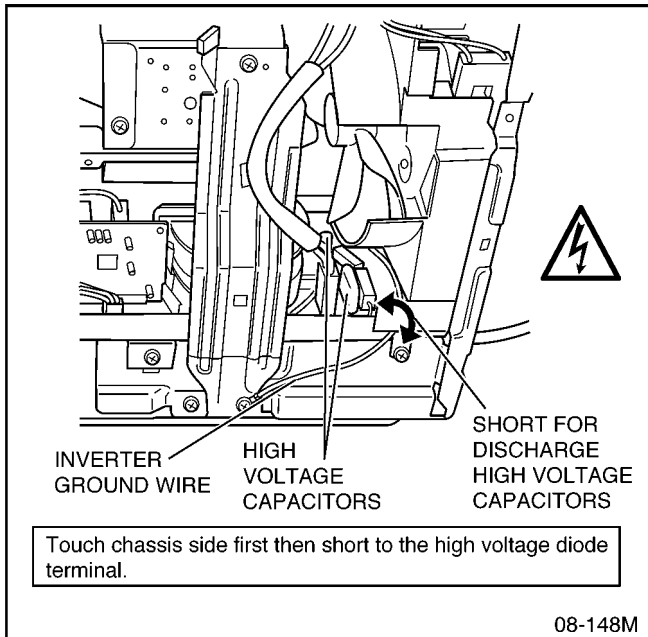


WARNING

There is high-voltage present, with high-current capabilities in the circuits of the primary, and secondary windings, choke coil and heat sink of the Inverter. It is extremely dangerous to work on or near these circuits with oven energized. **DO NOT** measure the voltage in the high voltage circuit including filament voltage of magnetron.

WARNING

Never touch any circuit wiring with your hand nor with an insulated tool during operation.

WARNING OF INVERTER POWER SUPPLY (U) GROUNDING
 Check the High Voltage Inverter Power Supply circuit grounding. This High Voltage Inverter Power Supply circuit board must have a proper chassis ground by the grounding bracket to the chassis ground; otherwise, this H.V. Inverter circuit board will expose very high voltage and cause extreme DANGER! Be sure to have proper grounding by the grounding plate and screws.

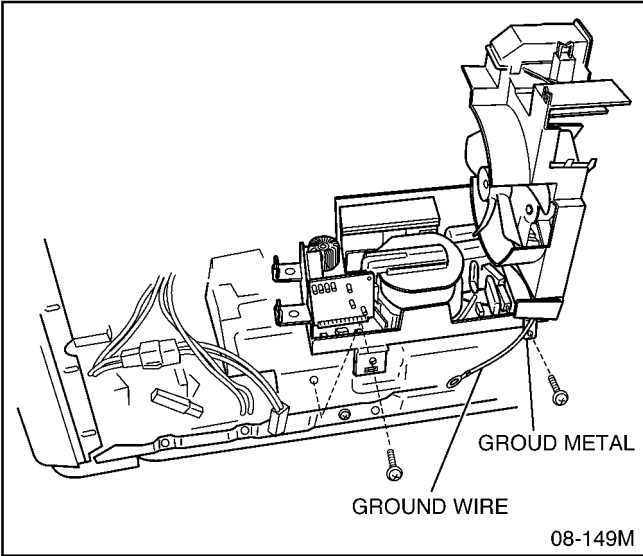

7.3. When parts must be replaced, remove the power plug from the outlet.

7.4. When the 10A 250V fuse is blown due to the operation of short switch:

WARNING
 When the 10A 250V. fuse is blown due to the operation of short switch, you must replace Primary latch switch and short switch. Also replace power relay 1 (RY1) when the continuity check reads shorted contacts (1-2).

1. This is mandatory. Refer to "Adjustments and Measurement" for these switches.
2. When replacing the fuse, confirm that it has the appropriate rating for these models.
3. When replacing faulty switches, be sure mounting tabs are not bent, broken or otherwise deficient in their ability to hold the switches.

7.5. Avoid inserting nails, wire, etc. through any holes in the unit during operation.

Never insert a wire, nail or any other metal object through the

lamp holes on the cavity or any other holes gaps, because such objects may work as an antenna and cause microwave leakage.

7.6. Confirm after repair

1. After repair or replacement of parts, make sure that the screws of the oven, etc. are neither loose nor missing. Microwaves might leak if screws are not properly tightened.
2. Make sure that all electrical connections are tight before inserting the plug into the wall outlet.

CAUTION
MICROWAVE RADIATION
 DO NOT BECOME EXPOSED TO RADIATION FROM THE MICROWAVE GENERATOR OR OTHER PARTS CONDUCTING MICROWAVE ENERGY.

IMPORTANT NOTICE

1. The following components have potentials above 250V while the appliance is operated.
 - * Magnetron
 - * Heat sink of H.V. INVERTER (U)
 - * High voltage transformer (H.V. INVERTER (U))
 - * High voltage diode (H.V. INVERTER (U))
 - * High voltage capacitors (H.V. INVERTER (U))
 Pay special attention on these portions.
2. When the appliance is operated with the door hinge or magnetron fixed incorrectly, the microwave leakage can reach more than 5mW/cm². After repair or exchange, it is very important to check if magnetron and the door hinge is correctly fixed.

8 DISASSEMBLY AND PARTS REPLACEMENT PROCEDURE


8.1. Magnetron

1. Discharge the high voltage capacitor.
2. Remove 2 screws holding magnetron thermal cutout bracket.
3. Disconnect 2 high voltage lead wires from magnetron filament terminals.
4. Remove 4 screws holding the magnetron.

NOTE: After replacement of the magnetron, tighten mounting screws properly making sure there is no gap between the waveguide and the magnetron to prevent microwave leakage.

CAUTION

When replacing the magnetron, be sure the antenna gasket is in place.

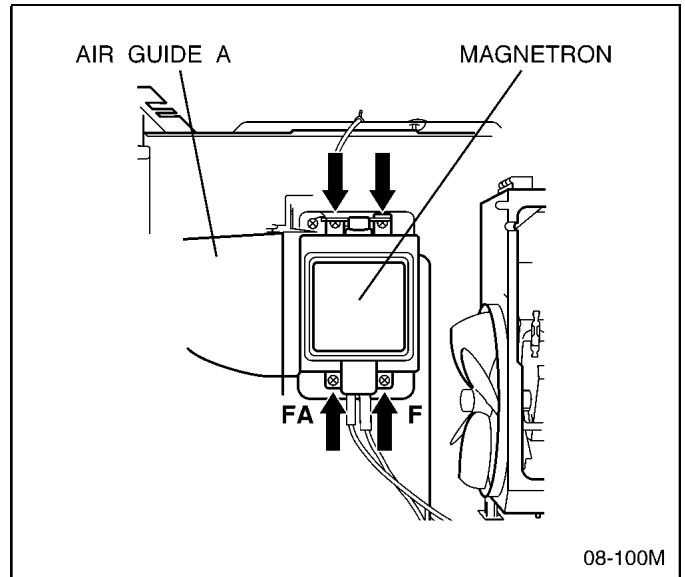

08-100M

8.2. Digital programmer circuit (DPC) and membrane key board.

NOTE: Be sure to ground any static electric charge built up on your body, before handling the DPC.


1. Disconnect all connectors from D.P.C.
2. Remove 3 screws holding escutcheon base and slide the escutcheon base upward slightly.
3. Remove flat cable of CN5.
4. Remove 5 screws holding DPC.

To replace switch PCB.

5. Remove 2 knobs.
6. Remove 6 screws.

To replace buttons

1. Remove escutcheon bracket from escutcheon base by freeing 6 catch hooks on the escutcheon base.
2. Replace whole button assembly.

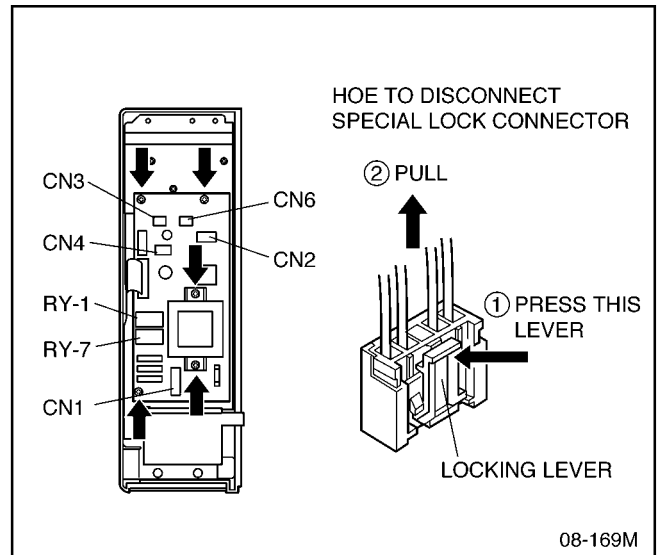

08-169M


8.3. Low voltage transformer and/or power relays

NOTE: Be sure to ground any static electric charge built up on your body before handling the DPC.

1. Using solder wick or a desoldering tool and 30W soldering iron, carefully remove all solder from the terminal pins of the low voltage transformer and/or power relays.

NOTE: Do not use a soldering iron or desoldering tool of more than 30 watts on DPC contacts.

2. With all the terminal pins cleaned and separated from DPC contacts, remove the defective transformer/power relays and install new transformer/power relays making sure all terminal pins are inserted completely. Resolder all terminal contacts carefully.

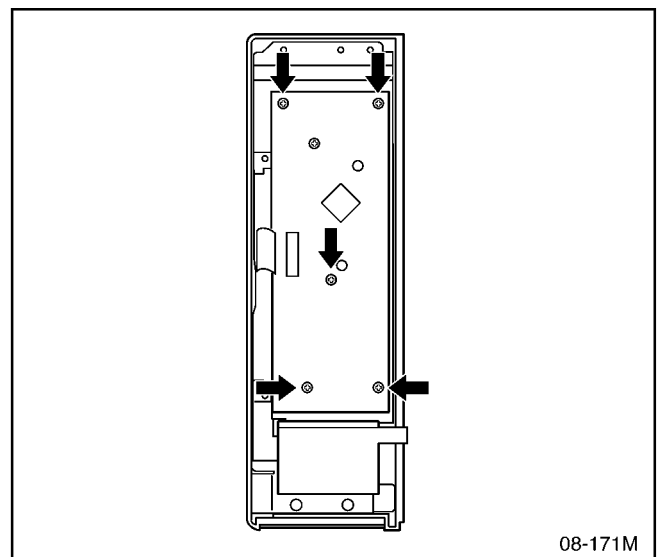





08-171M

8.4. Fan motor

1. Disconnect 2 lead wires from fan motor terminals.
2. Disconnect 2 lead wires from fuse holder terminals. (some models)
3. Remove 4 screws holding fan motor and orifice assy and detach the orifice assy with fan motor from oven assy.
4. Remove fan blade from the fan motor shaft by pulling it straight out.
5. Separate the fan motor from the orifice assy by freeing 2 catch hooks on the orifice assy.

8.5. Heater




1. Remove lead wires from lead wire holders.
2. Remove belt from pulleys of circulation fan.
3. Remove 2 screws holding heater fan motor bracket.
4. Remove 1 screw holding exhaust guide.
5. Remove 2 screws holding oven temp sensor.
6. Disconnect 2 lead wires from heater terminals.
7. Remove 4 screws holding the both sides of heater unit and lift it up carefully.
8. Remove 3 screws holding heater supports and detach the heater.

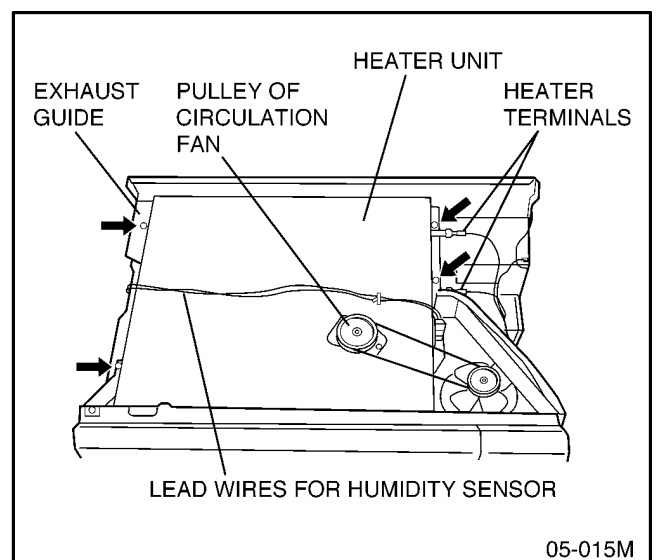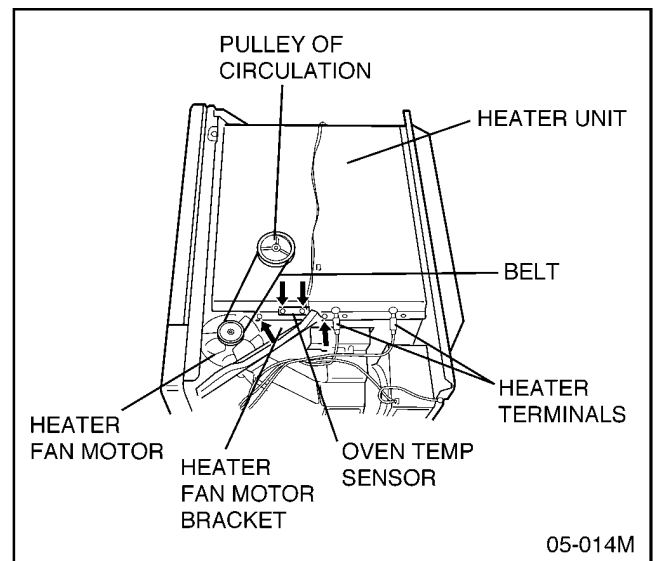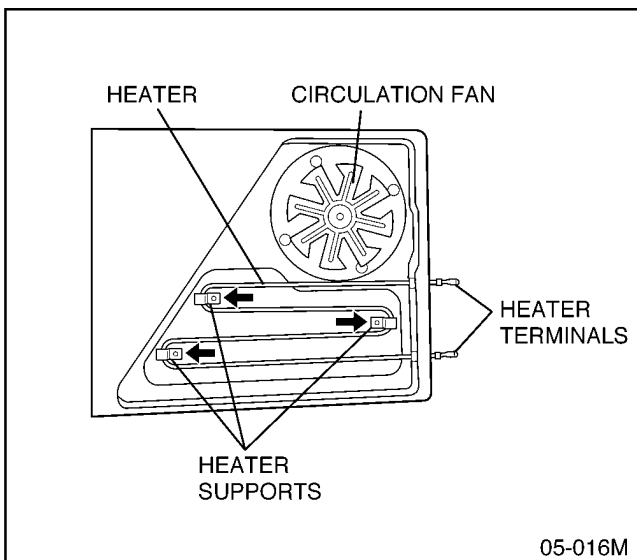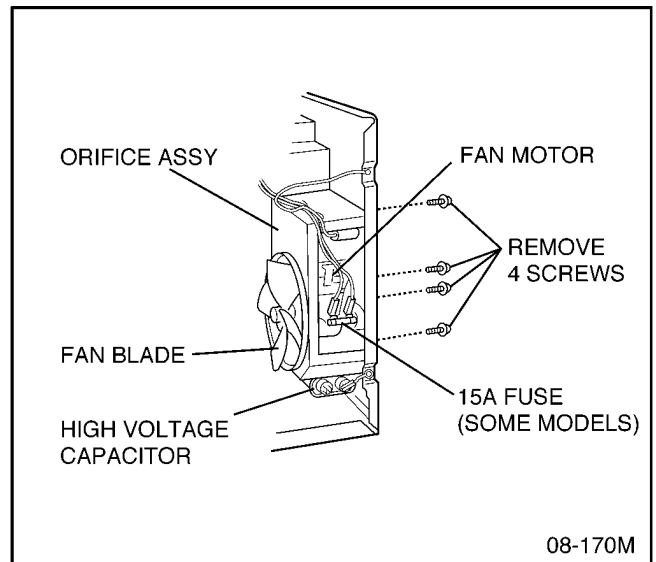

8.6. Door assemble


1. Open the door and remove 4 screws holding door C.

2. Remove the door C from door E by carefully pulling outward starting from upper right hand corner.
3. Separate the door A from the door E by freeing 8 catch hooks on the door A.
4. Remove door key spring and door key.

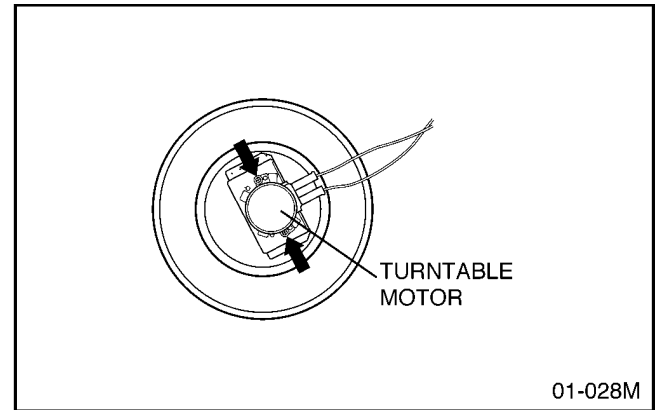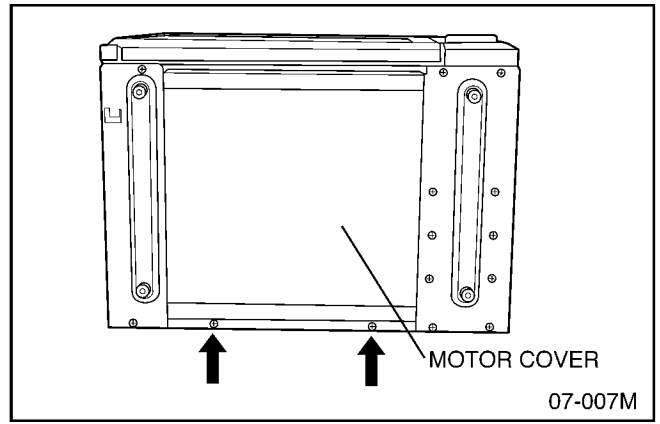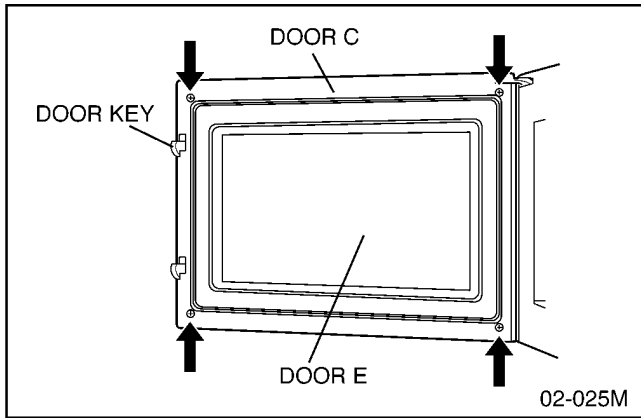

After replacement of the defective component parts of the door, reassemble it and follow the instructions below for proper installation and adjustment so as to prevent an excessive microwave leakage.

1. When mounting the door to the oven, be sure to adjust the door parallel to the bottom line of the oven face plate by moving the upper hinge and lower hinge in the direction necessary for proper alignment.
2. Adjust so that the door has no play between the inner door surface and oven front surface. If the door assembly is not mounted properly, microwave may leak from the clearance between the door and oven.

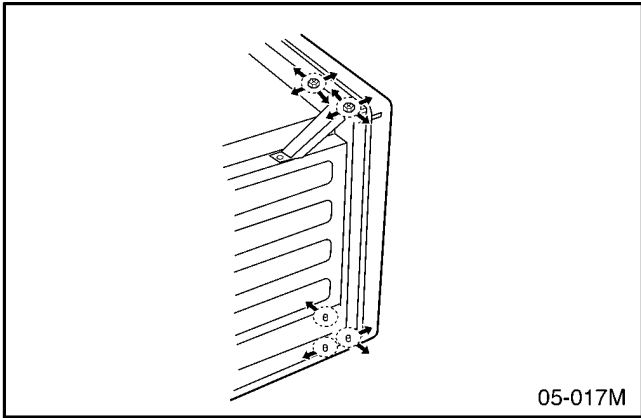



8.7. Turntable motor

1. Remove 2 screws holding motor cover.
2. Disconnect 2 lead wires from turntable motor.
3. Remove 2 screws holding turntable motor.

8.8. Inverter PCB

1. Remove 2 screws holding inverter bracket to oven chassis.
2. Remove A screw holding air guide.
3. Remove grounding lead wire.
4. Remove 2 screws holding noise filter PCB. (some models only)
5. Remove all lead wires from inverter PCB.
6. Slide left and take out inverter PCB with brackets.
7. **Remove A screw holding inverter PCB to bracket from bottom.**
8. Remove 3 screws holding inverter PCB to bracket.
9. Remove inverter PCB from its bracket by releasing several catch hooks.
10. When re-install, make sure to place grounding plate in its place.

Missing grounding is very danger.

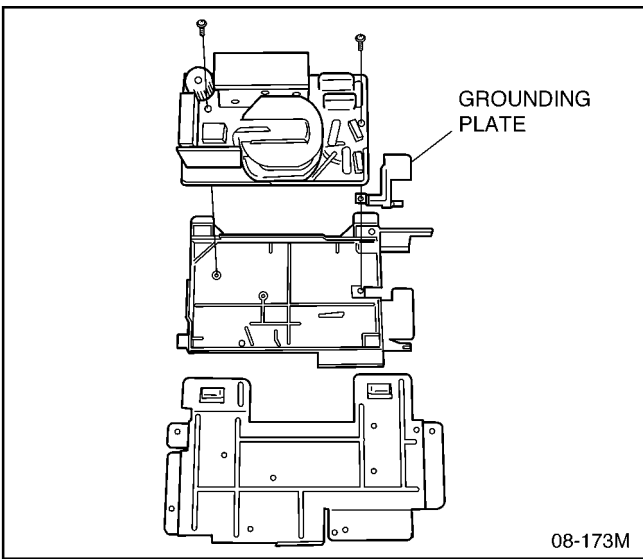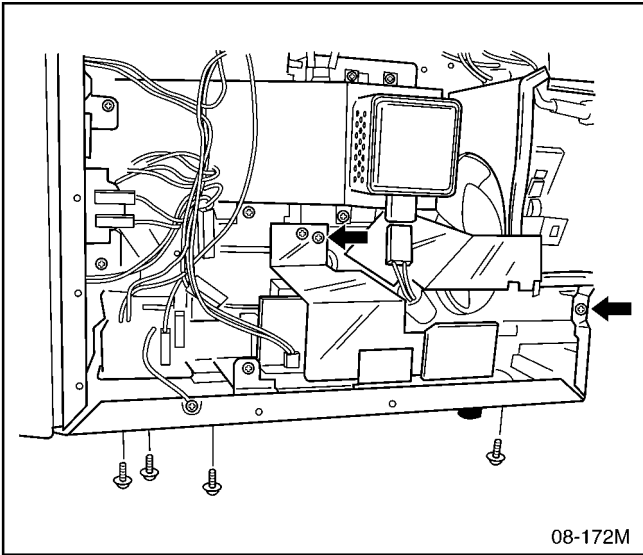

9 COMPONENT TEST PROCEDURE

DANGER **NEW H.V.**

1. High voltage is present at the high voltage terminal of the High Voltage Inverter (U) including aluminum heat sink during any cook cycle.
2. It is neither necessary nor advisable to attempt measurement of the high voltage.
3. Before touching any oven components, or wiring, always unplug the oven from its power source and discharge the high voltage capacitor.

9.1. Primary Latch Switch, Secondary (Secondary Latch Switch and Power Relay 1) Interlocks.


1. Unplug the lead connectors to Power Relay 1 and verify continuity of the power relay 1 1-2 terminals.
 2. Unplug lead connectors to Primary Latch Switch and Secondary Latch Switch.
 3. Test the continuity of switches at door opened and closed positions with ohm meter (low scale).
- Normal continuity readings should be as follows.

| | Door Opened | Door Closed |
|------------------------|------------------------|------------------------|
| Primary Latch Switch | $\infty \Omega$ (open) | 0 Ω (close) |
| Secondary Latch Switch | $\infty \Omega$ (open) | 0 Ω (close) |
| Power Relay 1 | $\infty \Omega$ (open) | $\infty \Omega$ (open) |

9.2. Short Switch / Monitor Circuit

1. Unplug lead wires from H. V. Inverter primary terminals.
 2. Connect test probes of ohm meter to the disconnected leads which were connected to H. V. Inverter.
 3. Test the continuity of short switch with door opened and closed positions using lowest scale of the ohm meter.
- Normal continuity readings should be as follows.

| Door Opened | Door Closed |
|-------------|-----------------|
| 0 Ω | $\infty \Omega$ |

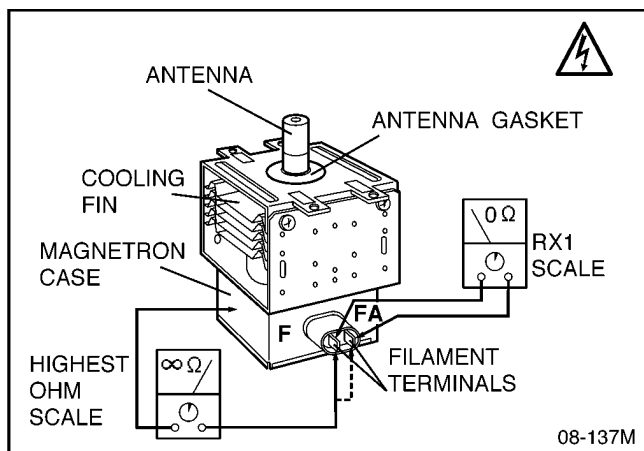

9.3. Magnetron (NEW H.V.)

Continuity checks can only indicate an open filament or a shorted magnetron. To diagnose for an open filament or shorted magnetron.

1. Isolate magnetron from the circuit by disconnecting the leads.
2. A continuity check across magnetron filament terminals should indicate one ohm or less.
3. A continuity check between each filament terminal and magnetron case should read open.

NOTE


Magnetron used for this model is unique type for inverter power supply system. Make sure to use the one as listed in the part list.

9.4. Membrane key board (Membrane switch assembly)

Check continuity between switch terminals, by tapping an appropriate pad on the key board. The contacts assignment of the respective pads on the key board is as shown in digital programmer circuit.

9.5. Inverter Power Supply (U) (NEW H.V.)

DO NOT try to REPAIR this H. V. Inverter power supply (U).
Replace as whole H. V. Inverter (U) Unit.
Refer to warning on page 2.

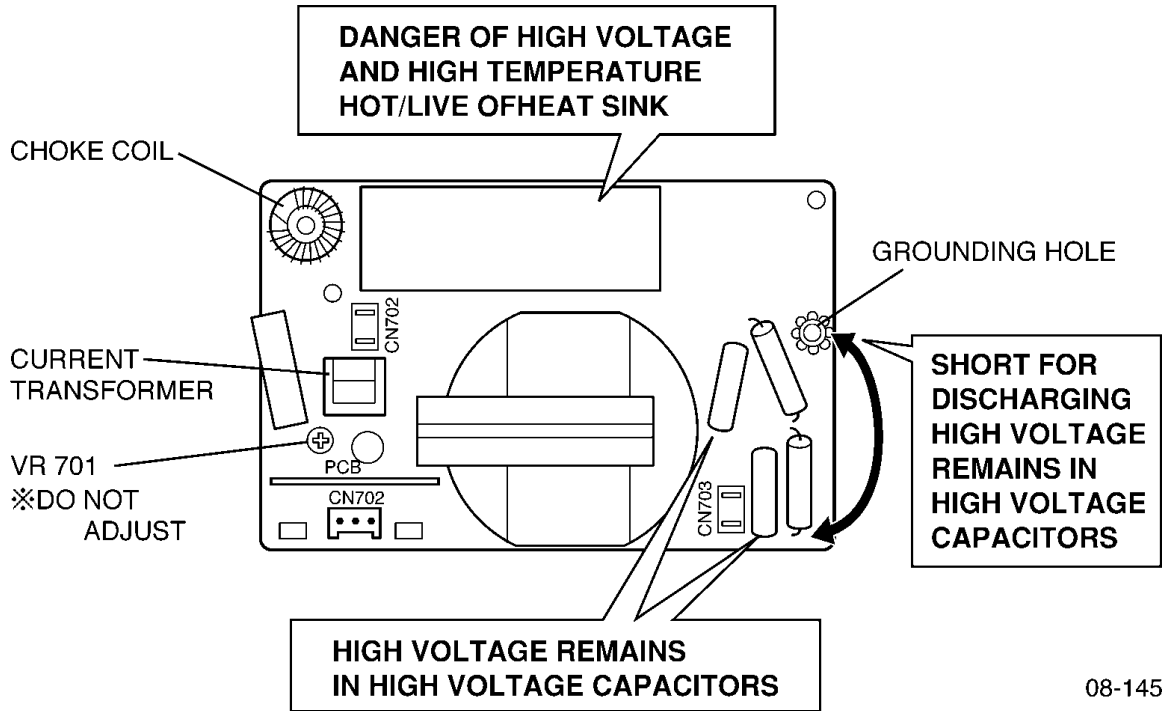

08-145M

9.6. Inverter Power Supply (U) (NEW H,V,)

DANGER HIGH VOLTAGE

Test 1

1. Place 1 liter of water load into oven cavity.
2. Unplug 2 pin H. V. lead wire connector CN703 from magnetron tube.
3. Program oven at High power for 1 minute and press start.
 - a. After approx. 23 seconds, oven stops.
 - b. During oven operation, input current is approx. at 0.5 to 1.0A . If input current is OK, please proceed to test 2.

| | INPUT AMPARE | SYMPTOM |
|--------------|--------------|---|
| Unplug CN703 | 0.5 to 1A | Oven stops in 23 seconds after started. |

Test 2

Continued from Test 1

1. Unplug 3 pin connector, CN701 CN703 remain unplug.
2. Set oven at High power for 1 minute and start.
 - a. After approx. 3 seconds, oven.
 - b. During oven operation, input current should be less than 0.4A.

| | INPUT AMPARE | SYMPTOM |
|--------------|----------------|--|
| Unplug CN701 | less than 0.4A | Oven stops in 3 seconds after started. |

If both 1 and 2 are OK, the Inverter Power Supply (U) can be determined OK.

9.7. Steam Sensor and Digital Programmer Circuit

In order to determine if the steam sensor function of the digital programmer circuit is in working order or not, do the following test.

1. Place a water load (150 cc) in the oven.
2. Tap Sensor Reheat pad.
3. Tap Start Pad.
4. Steam Sensor detects steam about 1.5 to 4 minutes after the Start Pad is tapped.
5. T1 time cooking automatically switches to remaining time cooking (T2).
6. The remaining cooking time (T2) appears in display window. If the following cooking time appears, Steam Sensor function is normal.

| T1 TIME | T2 TIME (Remaining cooking time) |
|-------------------------|-------------------------------------|
| 1 Min. 30 Sec. ~ 4 Min. | 18 Sec. ~ 48 Sec. |

9.8. Oven temp sensor thermistor

This sensor monitors the heat produced by the heater circuit and maintains the oven temperature the user had selected. Normal room 10°C to 30°C. The reading across the oven sensor thermistor should be within 100K ohm to 300K ohm when reading in an area with the 50°F to 90°F room temperature range.

If the resistance reading is out of the range stated here, the sensor is defective and must be replaced.

NOTE 1: When measuring resistance disconnect the 3-pin

connector (CN6) from the DPC otherwise a false reading may be indicated.

NOTE 2: If checking an oven sensor thermistor just after the microwave oven has been operating, the sensor of course won't be room temperature. In this case the sensor must be removed and allowed to cool down to the 10°C to 30°C range.

9.9. Humidity Sensor and digital programmer circuit

CAUTION

Do not touch any parts of the circuitry on the digital programmer circuit since static electric discharge may damage this control panel. Always ground yourself while working on this panel to discharge any static charge built up on your body.

1. Check across sensor heater terminals. Normal cold resistance should read approx. 4.5 ohm.
2. In order to determine if the Auto/Humidity Sensor function of the digital programmer circuit is in working order or not, do the following test.
 - a. Place a water load in the oven.
 - b. Unsolder 2 black wires connected to sensor terminals.
 - c. Tap Sensor Reheat Pad to set auto sensor cooking and tap Start Pad.
 - d. About 10 seconds after Start Pad is touched, short 2 black wires for 5 seconds and then remove them. Before shorting the 2 black wires you can watch the sensor heater glow red.
 - e. Approx. 75 seconds after the Start Pad is pressed (T0 TIME), short the 2 black wires again.
 - f. "AUTO" should disappear in display window and following digits (see chart) should appear indicating **balance of cooking time (T2 TIME). The time should start to count down and oven should shut off when the time has elapsed.

| * T0 TIME | ** T2 TIME (balance of cooking time) |
|-------------------|---|
| 70 sec. ~ 80 sec. | 21 ~ 24 sec. |

The Auto Sensor function in the digital programmer circuit is working in order if above condition is obtained.

9.10. Oven temp sensor thermistor



This sensor monitors the heat produced by the heater circuit and maintains the oven temperature the user had selected. Normal room temperature, especially in a kitchen can vary anywhere from 10°F to 30°F. The reading across the oven sensor thermistor should be within 100K ohm to 500K ohm when reading in an area within the 10°F to 30°F room temperature range.

If the resistance reading is out of the range stated here, the sensor is defective and must be replaced.

NOTE 1: When measuring resistance disconnect the 4-pin connector (CN3) from the DPC otherwise a false reading may be indicated.

NOTE 2: If checking an oven sensor thermistor just after

the microwave oven has been operating, the sensor of course won't be room temperature. In this case the sensor must be removed and allowed to cool down to the 50°F to 90°F range.

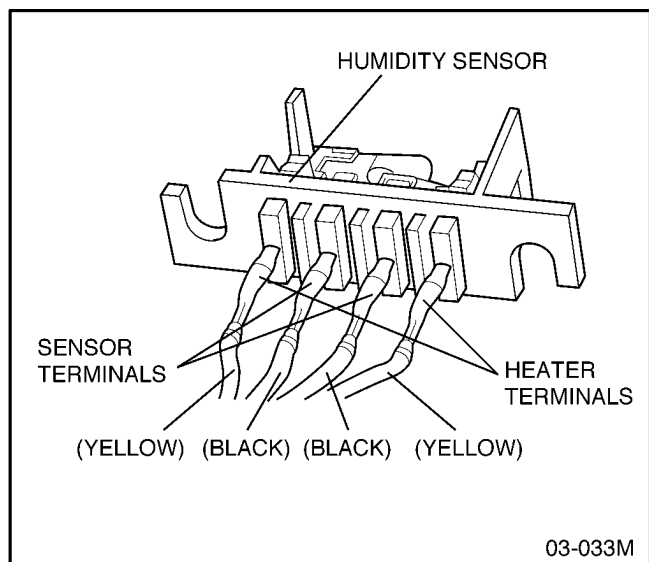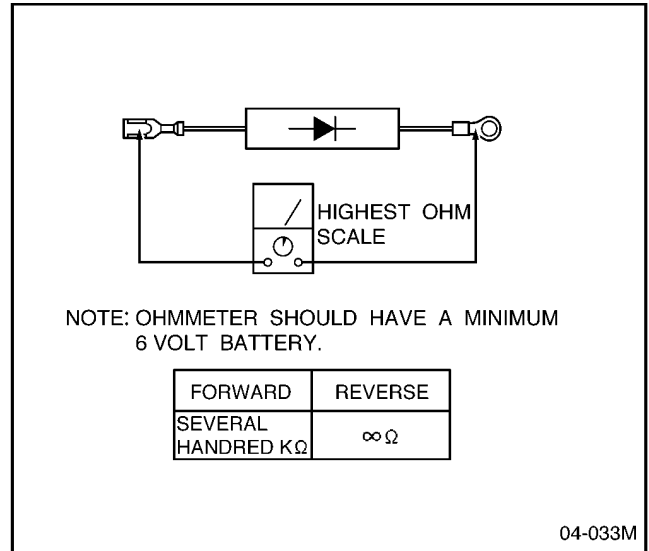

10 MEASUREMENTS AND ADJUSTMENTS

10.1. Adjustment of Primary latch switch, Secondary latch switch and short switch

1. When mounting Primary latch switch, Secondary latch switch and short switch to door hook assembly, mount the Primary latch switch, the Secondary latch switch and the short switch to the door hook assembly as shown in table.

NOTE: No specific adjustment during installation of Primary latch switch, Secondary latch switch and short switch to the door hook is necessary.

2. When mounting the door hook assembly to the oven assembly, adjust the door hook assembly by moving it in the direction of arrow in table so that the oven door will not have any play in it. Check for play in the door by pulling the door assembly. Make sure that the latch keys move smoothly after adjustment is completed. Completely tighten the screws holding the door hook assembly to the oven assembly.

3. Reconnect the short switch and check the continuity of the monitor circuit and all latch switches again by following the components test procedures.

10.2. Measurement of microwave output

The output power of the magnetron can be determined by performing IEC standard test procedures. However, due to the complexity of IEC test procedures, it is recommended to test the magnetron using the simple method outlined below.

Necessary Equipment:

*1 liter beaker *Glass thermometer

*Wrist watch or stopwatch

NOTE: Check the line voltage under load. Low voltage will lower the magnetron output. Take the temperature readings and heating time as accurate as possible.

1. Fill the beaker with exactly one liter of tap water. Stir the water using the thermometer and record the beaker 1 s temperature (recorded as T1).
2. Place the beaker on the center of glass cook plate. Set the oven for High power and heat it for exactly one minute.
3. Stir the water again and read the temperature of the beaker (recorded as T2).
4. The normal temperature rise at High power position for each models is as shown in table.

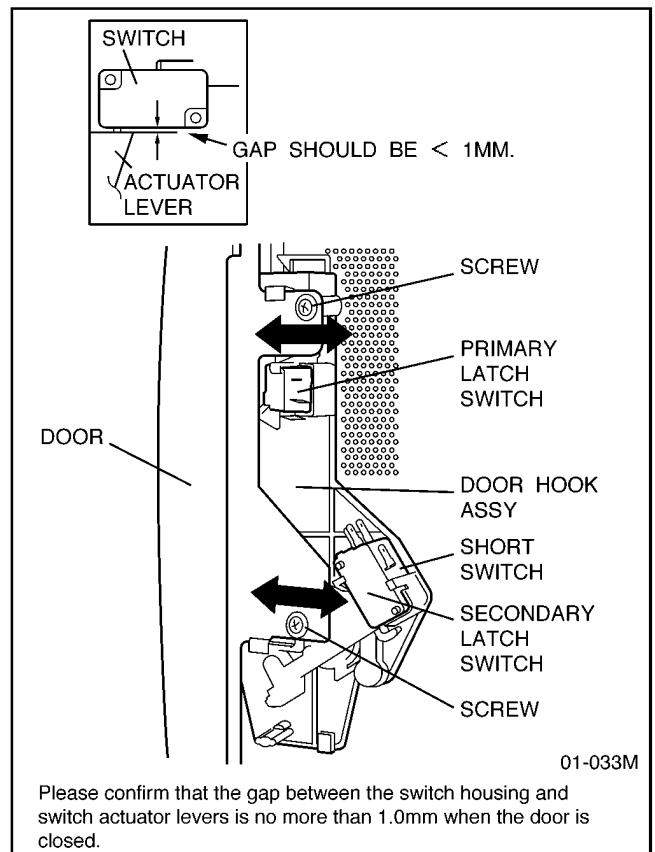


TABLE (1 l -1 min. test)

| RATED OUTPUT | TEMPERATURE RISE |
|--------------------|------------------|
| 1000 W (IEC705-88) | Min. 8.6°C |

11 TROUBLESHOOTING GUIDE (NEW H.V.)


DANGER HIGH VOLTAGES

1. **DO NOT RE-ADJUST PRESET VOLUME on the H.V.Inverter (U).** It is very dangerous to repair or adjust without sufficient test equipment because this circuit handles very large current with very high voltage. Off alignment of inverter board operation will be dangerous.
2. Ensure proper grounding before checking for trouble.
3. Be careful of the high voltage circuitry, taking necessary precautions when troubleshooting.
4. Discharge high voltage remains in the H. V. Inverter (U).
5. When checking the continuity of the switches or the H.V.Inverter, disconnect one lead wire from these parts and then check continuity with the AC plug removed. To do otherwise may result in a false reading or damage to your meter. When disconnecting a plastic connector from a terminal, you must hold the plastic connector instead of the lead wire and then disconnect it, otherwise lead wire may be open or the connector cannot be removed.
6. Do not touch any parts of the circuitry on the digital programmer circuit, since static electric discharge may damage this control panel. Always touch yourself to ground while working on this panel to discharge any static charge in your body.
7. 220/230/240V AC is present on the digital programmer circuit (Terminals of power relay's and primary circuit of Digital Programmer Circuit. When troubleshooting, be cautious of possible electrical shock hazard.

Before troubleshooting, operate the microwave oven following the correct operating procedures in the instruction manual in order to find the exact cause of any trouble, since operator error may be mistaken for the oven's malfunction.


(Trouble 1) Oven stops operation during cooking

| | SYMPTOM | CAUSE | CORRECTIONS |
|----|--|---|--|
| 1. | Oven stops in <u>3 seconds</u> after pressing start pad | No 120V AC is supplied to H.V.Inverter (U) CN702 terminals | 1. Latch Switch 2. Power relay RY-1 3. Loose lead wire connector CN702 |
| | Oven stops in <u>23 seconds</u> after pressing start pad | H.V.Inverter (U) operates by the control signals from DPC but magnetron is not oscillating | 1. Magnetron 2. Loose lead wire connector CN701, CN703 |
| | Oven stops in <u>10 seconds</u> after pressing start pad (Auto sensor cooking) | Steam sensor circuit is not functions | 1. Steam sensor 2. DPC 3. Loose wiring connector CN2 |
| | Oven stops in <u>60 seconds</u> after pressing start pad | Oven temperature sensor circuit is not functions | 1. Oven temp. sensor 2. Loose wiring CN5 |
| 2. | Oven stops in random time after pressing start pad | Most probably loose connection of connectors or door latch mechanism is not adjusted properly | 1. Align door, Door Latch Switches 2. Loose wiring connectors |

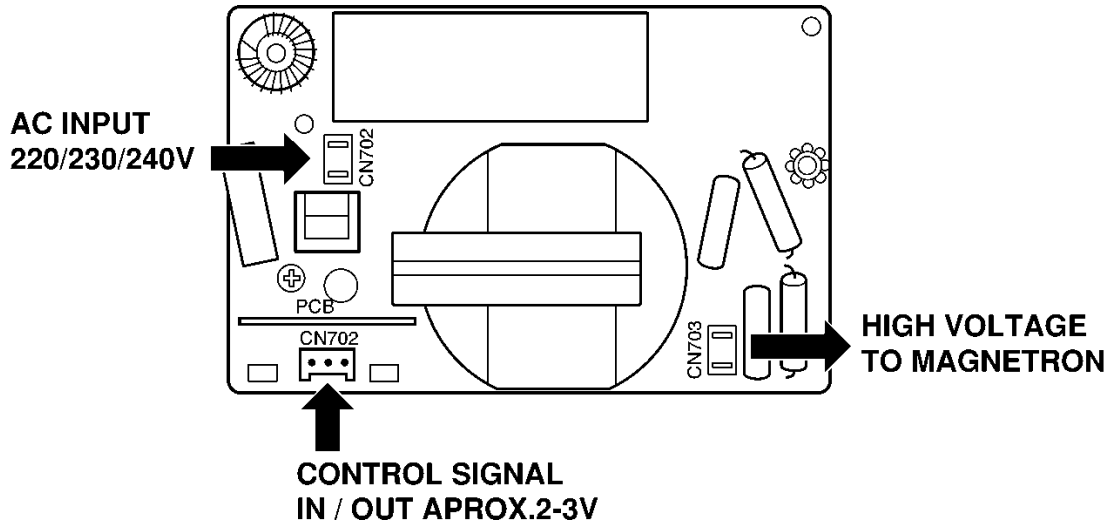

08-161M

(Trouble 2) Other troubles

| | SYMPTOM | CAUSE | CORRECTIONS |
|-----|---|--|--|
| 1. | Oven is dead. Fuse is OK. No display and no operation at all. | 1. Open or loose lead wire harness 2. Open thermal cutout 3. Defective DPC | Check fan motor when thermal cutout is defective. |
| 2. | No display and no operation at all. Fuse is blown. | 1. Shorted lead wire harness 2. Defective primary latch switch (NOTE 1) 3. Defective short switch (NOTE 1) 4. Defective H.V. Inverter power supply (U) Refer to component test procedure | Check adjustment of primary, secondary latch switch and short switch including door. Refer to inverter PCB Troubleshooting |
| | | NOTE 1: All of these switches must be replaced at the same time. (Refer to adjustment instructions.) Check continuity of power relay 1's contacts (between 1 and 2) and if it has continuity, replace power relay 1 also. | |
| 3. | Oven does not accept key input (Program). | 1. Key input is not in sequence 2. Open or loose connection of membrane key pad to DPC (Flat cable) 3. Shorted or open membrane key board 4. Defective DPC | Refer to operation procedure. Refer to DPC troubleshooting. |
| 4. | Oven lamp and fan motor turn on when oven is plugged in with door closed. | 1. Misadjustment or loose wiring of secondary latch switch 2. Defective secondary latch switch | Adjust door and latch switches. |
| 5. | Timer starts countdown but no microwave oscillation. (No heat while oven lamp and fan motor turn on) | 1. Off-alignment of latch switches 2. Open or loose connection of high voltage circuit especially magnetron filament circuit NOTE: Large contact resistance will bring lower magnetron filament voltage and cause magnetron to have lower output and/or be intermittent. 3. Defective high voltage component H.V. Inverter (U)  Magnetron 4. Open or loose wiring of power relay 1 5. Defective primary latch switch 6. Defective power relay 1 or DPC | Adjust door and latch switches. Check high voltage component according to component test procedure and replace if it is defective. Refer to DPC troubleshooting. |
| 6. | Oven can program but timer does not start countdown. | 1. Open or loose wiring of secondary latch switch 2. Off-alignment of secondary latch switch 3. Defective secondary latch switch | Adjust door and latch switches. |
| 7. | Microwave output is low. Oven takes longer time to cook food. | 1. Decrease in power source voltage 2. Open or loose wiring of magnetron filament circuit (Intermittent oscillation) 3. Aging change of magnetron | Consult electrician. |
| 8. | Turntable motor turns on when door is opened. | 1. Shorted primary latch switch | |
| 9. | Loud buzzing noise can be heard. | 1. Loose fan and fan motor | |
| 10. | Turntable motor does not rotate. | 1. Open or loose wiring of turntable motor 2. Defective turntable motor | |
| 11. | Heater does not turn on. | 1. Defective heater 2. Defective power relay 4 (RY4) 3. Defective DPC | |

(Trouble 3) Trouble related Digital programmer circuit

| SYMPTOM | STEP | CHECK | RESULT | CAUSE/CORRECTIONS |
|--|------|---|-------------------|--------------------------|
| No display when oven is first plugged in | 1 | Fuse resistor R28 1Ω | Normal | STEP 2 |
| | | | Open | Shorted circuit of IC-10 |
| | 2 | Q10 emitter (Output terminal) | Abnormal | Q10 |
| | | | Normal ≈ 5V | → IC-1, CX320, DISPLAY |
| No key input | 1 | Membrane switch continuity | Abnormal | Membrane switch |
| | | | Normal | IC-1 |
| No beep sound | 1 | IC-1 pin 8 voltage | Abnormal | IC-1 |
| | | | Normal | BZ, IC-220 |
| Power relay A (RY-2) does not turn on even though the program has been set and the start pad is tapped | 1 | IC-1 pin 41 voltage while operation | Abnormal | IC-1 |
| | | | Normal ≈ 5V | → Step 2 |
| | 2 | Short circuit between pin 8 and pin 12 of IC-220 | Still not turn on | RY-2 |
| | | | RY-2 turns on | IC-220 |
| No microwave oscillation at any power setting | 1 | IC-1 pin 9 voltages while operation at high power | Abnormal | IC-1 |
| | | | Normal 5... ≈ 5V | → Step 2 |
| | 2 | Q220 transistor | Abnormal | Q220 |
| | | | Normal | IC-220, RY-1 |
| Dark or unclear display | 1 | Replace display and check operation | Normal | DISPLAY |
| | | | Abnormal | IC-1 |
| Missing or lighting of unnecessary segment | 1 | Replace IC-1 and check operation | Normal | IC-1 |
| | | | Abnormal | DISPLAY |

(Trouble 4) Inverter circuit

Inverter PCB Repair Procedures

Warning for High Voltages!

1. Unplug oven when removing outer cabinet
2. Never touch inverter PCB with oven plugged in **inverter PCB handling over 7,000V and it is very danger!**
3. Heat sink is also energized with High Voltages!
4. Discharge high voltage before touching circuitry
5. When testing inverter PCB, completely install it into oven, put outer cabinet and make proper ground.

1. Discharge high voltage before touching Inverter PCB.

1. Unplug oven and leave it for more than 30 seconds before removing outer cabinet.
2. Use insulated lead wire to short across D701 Anode to D702 Cathode or short across magnetron filament terminals to the chassis ground. Please refer to service manual for detail of the specified model.

2. Remove inverter PCB from oven before troubleshooting.

Refer to related service manual for inverter PCB removal.


1. Visual check:

- a. PCB board: Any crack on board, burnt printed copper foil pattern? Any cockroach, bugs excrements, any mark of wet?
- b. Components: Any damaged components? Any burnt, broken or missing?


3. Check component by circuit tester.

**Make sure remove inverter PCB when continuity check
Do not test component when inverter PCB is installed**

How to discharge high voltage capacitors

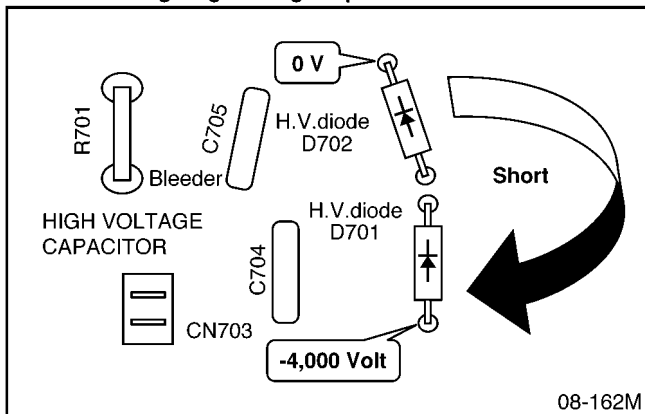

How to check semi conductor IGBT

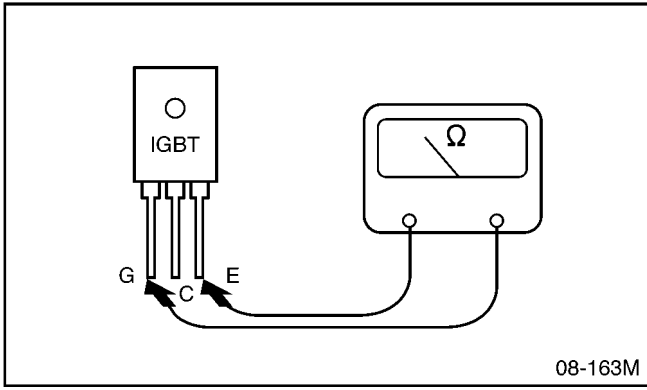

08-163M

1. How to check power transistors (Q701, Q702). To measure, suck a solder from its legs completely unless false reading may observe and mislead a troubleshooting. Measure across pins between E-C, E-G, C-G, E-black lead, C-red lead of tester should be infinite and may have some reading

in reverse, it is normal. Refer to attached table for normal reading.

2. DB701 Diode Bridge
3. C704, C705 High voltage Capacitors. D702 and C705, D701 and C704 are parallel connected therefore, remove component to measure when diode is shorted.
4. D701, D702 High voltage Diodes

| | FORWARD | REVERSE |
|-----|---------|---------|
| E-C | Some Ω | ∞ |
| E-G | ∞ | ∞ |
| C-G | ∞ | ∞ |


08-164M

| | | FORWARD | REVERSE |
|--|-------|---------|---------|
| | ~ - + | Some Ω | ∞ |
| | ~ - - | Some Ω | ∞ |
| | ~ - ~ | ∞ | ∞ |
| | + - - | Some Ω | ∞ |

| BETWEEN TERMINALS | FORWARD | REVERSE |
|---------------------------------------|--|--|
| <p>A-K</p> <p>INSIDE OF HV. DIODE</p> | <p>∞ infinite Circuit tester employed lower voltage battery</p> <p>Several k ohm to several hundred k ohm will be observed Circuit tester should employed more than 9V battery</p> | <p>∞ infinite It does not matter by internal battery voltage</p> |


4. How to replace power transistors Q701, Q702 and Bridge Diode DB701.

1. To remove Q701, Q702 and DB701 unsolder their legs first, next remove a screw that holding the heatsink onto the PCB then detach the heatsink as shown below.
Service Hints: For easy solder removal, use one soldering iron to heat a solder and use solder sucker iron to suck solder.
2. Make sure to replace both Q701 and Q702 at a time with the same maker.
3. Make sure to apply heat conduction grease between transistor and heat sink.
4. NO DUST SHOULD CAUGHT between heat sink and power transistor unless it causes looseness of heat conduction and insufficient cooling to blow components.

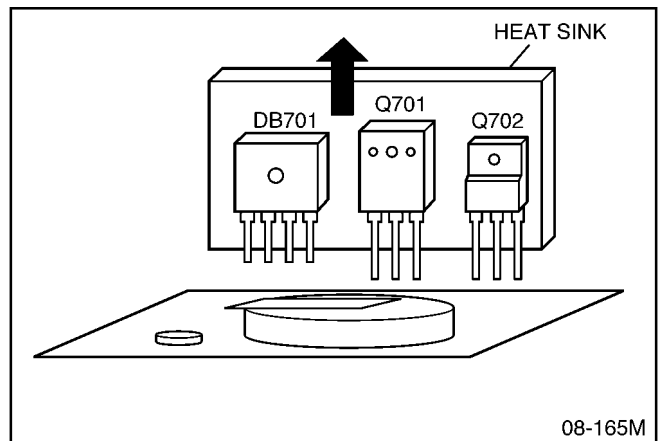

08-165M



Apply silicone grease

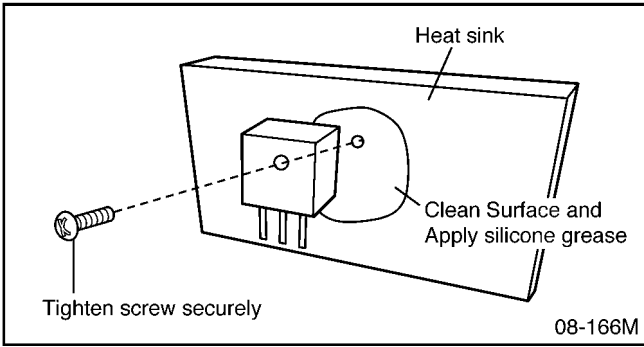

5. Screw must be tighten securely.

6. Install the heatsink onto the PCB by a screw and make sure to apply extra solder between legs and PCB pattern so that it's able to flow 15A or more main current.

Applying extra solder

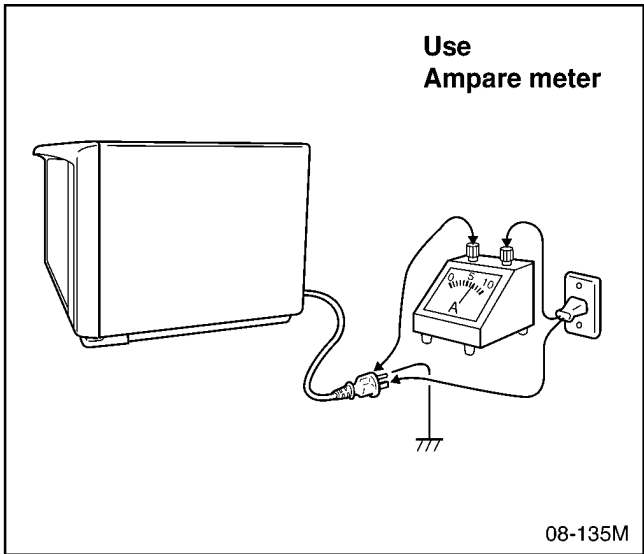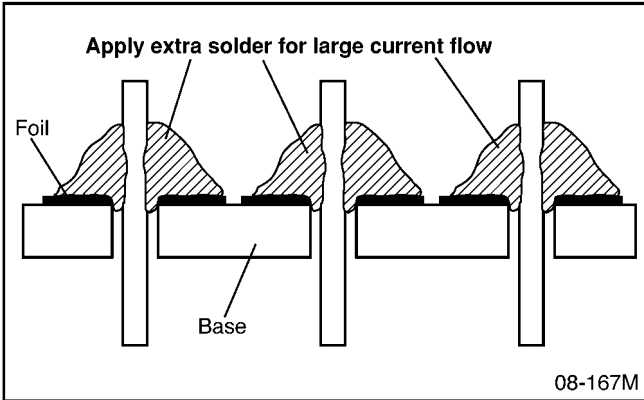

7. Apply extra solder onto Q701 and Q702 legs and printed foil pattern to be able to hold main large current of more than 15A.

Service hint:

For easy removal of solder, apply some solder first than suck it all.

8. How to test repaired Inverter PCB.

WARNING:


1. Do not test Inverter PCB with using any extention cable
Open gounding of inverter PCB is so DANGER.
2. Make sure to check no Bridge solder nor cold solder joint.
1. Install Inverter PCB into oven with screws securely, plug in CN701, CN702 and CN703.
2. Insert AC plug through the Amper meter with specified voltage.

NOTE: Current will be changed by the input AC voltage.

3. Operate the oven at High power setting for 1 minute.
4. Read input current which should be within oven specification.

NOTE: Input current will be decreased after a certain cooking period.

5. Adjustment is not necessary when replacing transistors
You may adjust the preset volume control VR701 to meet the specified input current when Transformer is replaced.

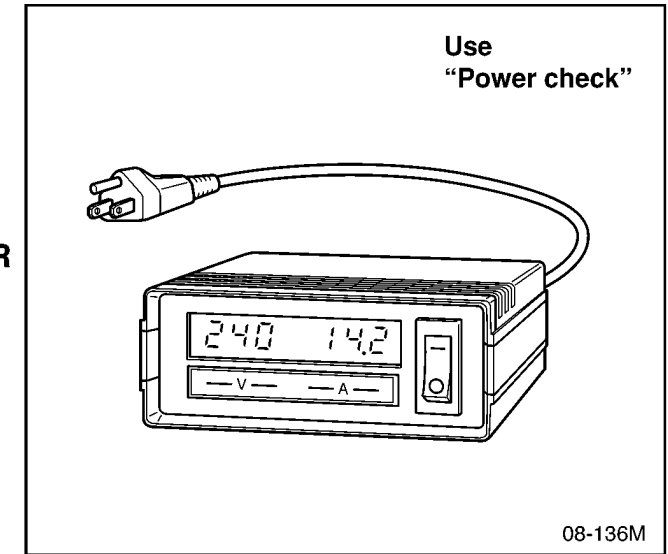

OR

How to test oven

| | |
|----------------------|----------|
| MAX AMPS AT BIGINING | 7.1~8.7A |
| AFTER 25 MINUTES | 4.7~5.7A |

08-168M

VR701




No adjustment is necessary when IGBT Diodes, capacitors are replaced.

Preset Volume control

NOTE: WHEN TRANSFORMERS OR IC WAS REPLACED MAKE SURE ADJUST VOLUME FOR PROPER INPUT AMPARES.

12 HOW TO CHECK THE SEMICONDUCTORS USING AN OHM METER

Diode

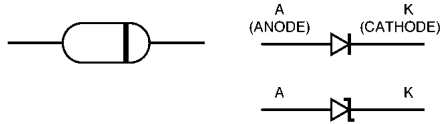


| | FORWARD | REVERSE |
|-----|---------|----------|
| A-K | SMALL | ∞ |

Transistor

NPN Transistor

2SC.....

2SD.....

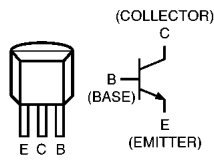


| | FORWARD | REVERSE |
|-----|----------|----------|
| B-E | SMALL | ∞ |
| B-C | SMALL | ∞ |
| C-E | ∞ | ∞ |

PNP Transistor


2SA.....

2SB.....

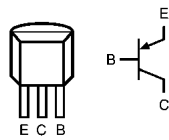

| | FORWARD | REVERSE |
|-----|----------|----------|
| B-E | SMALL | ∞ |
| C-B | SMALL | ∞ |
| C-E | ∞ | ∞ |


Digital Transistor PNP Transistor

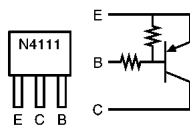

| | FORWARD | REVERSE |
|-----|-----------------------------|-----------------------------|
| E-B | 10k Ω ~ 30k Ω | 10k Ω ~ 30k Ω |
| C-B | 50k Ω ~ 90k Ω | ∞ |
| C-E | 40k Ω ~ 80k Ω | ∞ |


IGBT

(INSULATED GATE BIPOLAR TRANSISTOR)

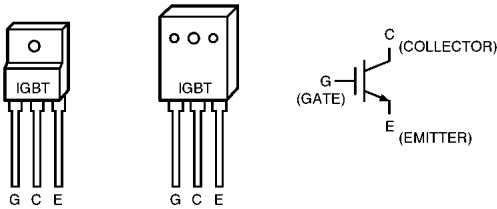

| | FORWARD | REVERSE |
|-----|----------|----------|
| E-C | SMALL | ∞ |
| E-G | ∞ | ∞ |
| C-G | ∞ | ∞ |

13 EXPLODED VIEW AND PARTS LIST

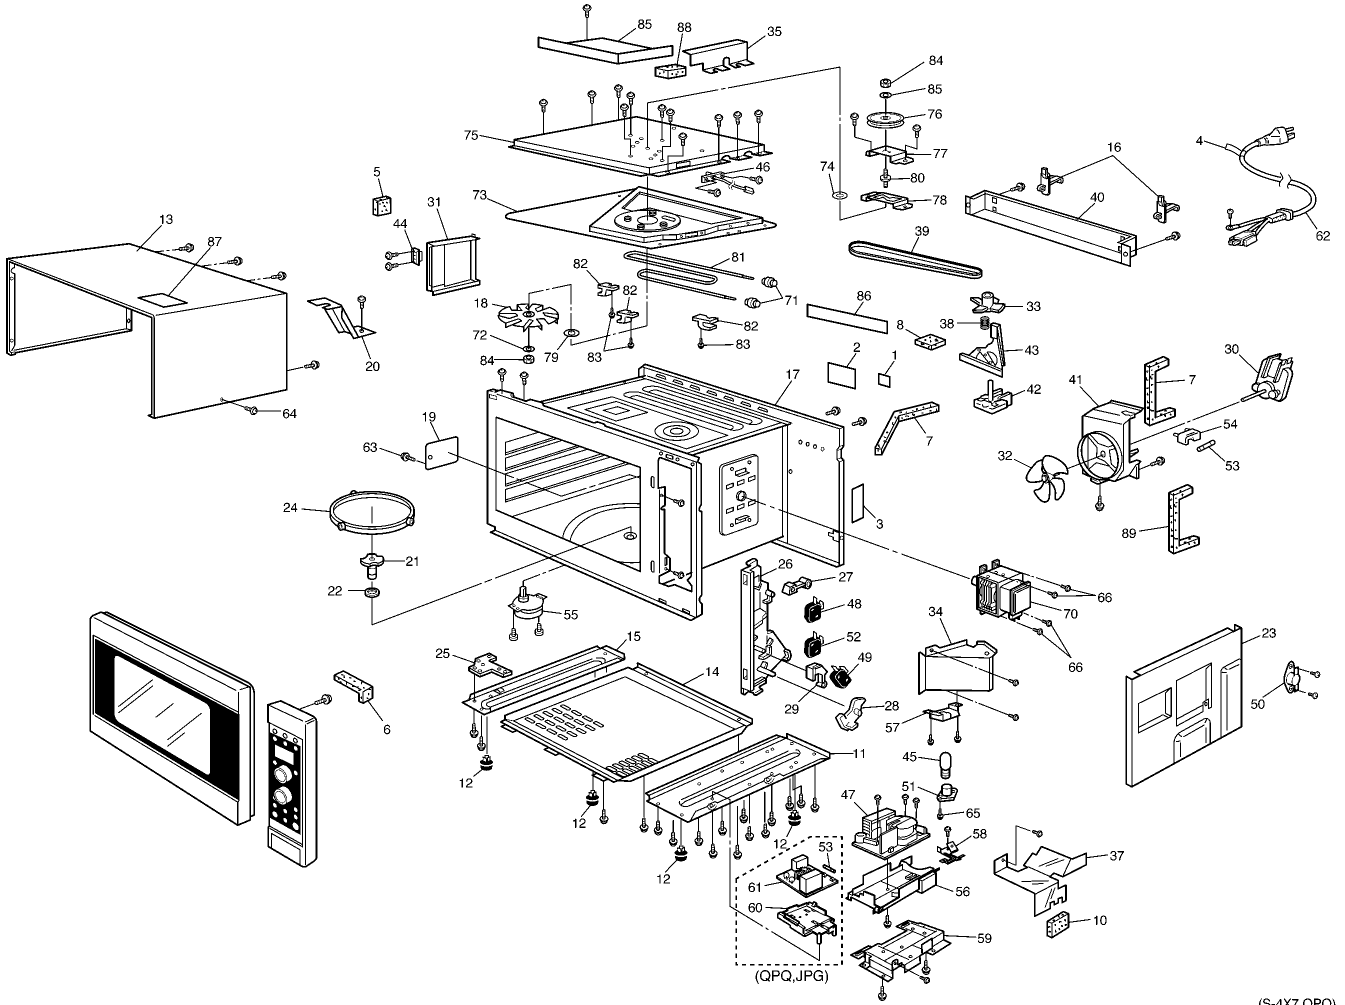

(S-4X7 QPQ)

14 PARTS LIST

When ordering replacement part(s) please use part number(s) shown in this parts list.

Do not use description of the part.

Important safety notice:

Components identified by \triangle mark have special characteristics important for safety.

When replacing any of these components, use only manufacturer's specified parts.

Alphabet marks in Remarks columns (I. e. HNE etc.) indicate parts applicable to only specified country models as follows.

HNE: For Hong Kong, JPG: For New Zealand, KKE: For U.A.E., Egypt, Iran,

KNQ: For Kuwait, Doha, Qatar, Oman, Baharain, Pakistan, LNK: For Philippines,

MNQ: For Malaysia, QPQ: For Australia, SNM: For Saudi Arabia,


TNE: For Thailand, Indonesia, YNQ: For Singapore

Parts without these marks can be used for all models.

| Ref. No. | Part No. | Part Name & Description | Pcs/ Set | Remarks |
|----------|--------------|--------------------------|----------|---|
| 1 | ANE00057J0XN | EARTH LABEL | 1 | NN-C2000P TNE |
| 2 | A00065460JP | CAUTION LABEL | 1 | |
| 2 | A00065540MN | CAUTION LABEL | 1 | NN-C2000P YNQ |
| 3 | ANE0033730GN | FUSE LABEL | 1 | NN-C2000P |
| 4 | ANE0239L00XN | CORD LABEL | 1 | NN-C2000P KKE/KNQ/SNM |
| 5 | ANE0902000CA | CUSHION RUBBER A | 1 | |
| 6 | ANE0921000BK | CUSHION RUBBER C | 1 | |
| 7 | ANE0924000AQ | CUSHION RUBBER C | 1 | |
| 7 | ANE0924000AQ | CUSHION RUBBER C | 1 | |
| 8 | ANE0922000DD | CUSHION RUBBER C | 1 | |
| 9 | ANE0902000AV | CUSHION RUBBER A | 1 | |
| 10 | ANE0924000GE | CUSHION RUBBER C | 1 | |
| 11 | A10014X00AP | BASE | 1 | |
| 12 | ANE1008-3W0 | RUBBER FOOT | 4 | |
| 12 | ANE1008-3W0 | RUBBER FOOT | 4 | |
| 12 | ANE1008-3W0 | RUBBER FOOT | 4 | |
| 12 | ANE1008-3W0 | RUBBER FOOT | 4 | |
| 13 | A10094X70GMN | CABINET BODY | 1 | NN-C2000P |
| 13 | A10094X70HQP | CABINET BODY | 1 | NN-C2000W |
| 14 | A10266660QP | BASE C | 1 | |
| 15 | A11294X00AP | BASE B | 1 | |
| 16 | A11406660QP | STOPPER | 2 | |
| 16 | A11406660HMK | STOPPER | 2 | NN-C2000P YNQ |
| 17 | A200A4X00AP | OVEN | 1 | \triangle |
| 18 | ANE22392L0AP | CIRCULATION FAN | 1 | |
| 19 | A20554X00AP | COVER | 1 | |
| 20 | A20764X00AP | REINFORCE BRACKET C | 1 | |
| 21 | A21315870GP | PULLEY SHAFT | 1 | |
| 22 | ANE2177-F80 | WASHER | 1 | |
| 23 | A22365450AP | RIGHT HEATER PANEL | 1 | |
| 24 | A290D4J00XN | ROLLER RING (U) | 1 | |
| 25 | A30076660QP | LOWER HINGE | 1 | \triangle |
| 26 | A3020-1200 | DOOR HOOK A | 1 | \triangle |
| 27 | A3136-1200 | HOOK SPACER A | 1 | |
| 28 | A31374650AP | HOOK SPACER B | 1 | |
| 29 | A31384650AP | HOOK SPACER C | 1 | |
| 30 | A400A5500QP | FAN MOTOR | 1 | NN-C2000P HNE/KKE/KNQ/MNQ/SNM/TNE/YNQ NN-C2000W (24.8W) |
| 30 | A400A4000LN | FAN MOTOR | 1 | NN-C2000P LNK (26W) |
| 31 | A400K5040AQ | EXHAUST GUIDE | 1 | |
| 32 | ANE40086W0AP | FAN | 1 | |
| 33 | A40085020AQ | FAN | 1 | |
| 34 | A40256660QP | AIR GUIDE A | 1 | |
| 35 | A40264X00AP | AIR GUIDE B | 1 | |
| 36 | A40306660QP | AIR GUIDE D | 1 | |
| 37 | A40474X00AP | AIR GUIDE E | 1 | |
| 38 | ANE4057-F50 | SPRING | 1 | |
| 39 | A40606660QP | BELT | 1 | |
| 40 | A41206660QP | EXHAUST COVER | 1 | |
| 41 | A41446660SN | ORIFICE | 1 | |
| 42 | A41799190QP | HEATER FAN MOTOR | 1 | NN-C2000P HNE/KKE/KNQ/MNQ/TNE/YNQ NN-C2000W (16W) |
| 42 | A41795080BP | HEATER FAN MOTOR | 1 | NN-C2000P LNK/SNM (35/33.5W) |
| 43 | A41804X00AP | HEATER FAN MOTOR BRACKET | 1 | |
| 44 | A601L4780AP | HUMIDITY SENSOR | 1 | |

| Ref. No. | Part No. | Part Name & Description | Pcs/ Set | Remarks |
|----------|--------------|-------------------------|----------|--|
| 45 | A60304080BP | INCANDESCENT LAMP | 1 | (20W/240V) |
| 46 | A605A4X70QP | THERMISTOR | 1 | |
| 47 | A606Y4V00GP | H.V.INVERTER (U) | 1 | △ |
| 48 | ANE6142-F60 | MICRO SWITCH | 2 | △(V-15G-3C26-1) (PRIMARY) |
| 49 | A61425180AP | MICRO SWITCH | 2 | △(L-3C2-2) (SECONDARY) |
| 50 | A61456670AP | THERMAL CUTOUT | 1 | △ |
| 51 | A61524650AP | SOCKET | 1 | |
| 52 | A61785180AP | MICRO SWITCH | 2 | △(L-2C2-2) (SHORT SW) |
| 53 | A62304210BP | FUSE | 1 | △(10A/250V) |
| 53 | A62304210BP | FUSE | 1 | △(10A/250V) |
| 54 | A62314000AP | FUSE HOLDER | 1 | NN-C2000P |
| 55 | A63266660HN | TURNTABLE MOTOR | 1 | NN-C2000P HNE/KKE/LNK/SNM/TNE (3.3W) |
| 55 | A63265850QP | TURNTABLE MOTOR | 1 | NN-C2000P KNQ/MNQ/YNQ NN-C2000W (2.5W) |
| 56 | A6585-1B10 | P.C.B.HOLDER A | 1 | |
| 57 | A66036000BP | OVEN LAMP BRACKET | 1 | |
| 58 | A6662-1880 | EARTH SPACER | 1 | |
| 59 | A67634X00AP | P.C.B.HOLDER B | 1 | |
| 60 | A67974X00CP | P.C.B.HOLDER C | 1 | NN-C2000W |
| 61 | A692Y4T00QP | NOISE FILTER (U) | 1 | NN-C2000W |
| 62 | A900C6660HN | AC CORD W/PLUG | 1 | △NN-C2000P HNE (220-240V) |
| 62 | A900C5450MK | AC CORD W/PLUG | 1 | △NN-C2000P KKE/KNQ/MNQ/YNQ (220-240V) |
| 62 | A900C6240CP | AC CORD W/PLUG | 1 | △NN-C2000P LNK (230-240V) |
| 62 | A900C9770SN | AC CORD W/PLUG | 1 | △NN-C2000P SNM (220-240V) |
| 62 | A900C5450TN | AC CORD W/PLUG | 1 | △NN-C2000P TNE (220V) |
| 62 | A900C6660JP | AC CORD W/PLUG | 1 | △NN-C2000W (240V) |
| 63 | XST4+5VS | SCREW | 1 | 4X5 (FOR COVER) |
| 64 | XTT4+8RDN | SCREW | 1 | 4X8 (FOR CABINET BODY) |
| 65 | XTWANE3+10S4 | SCREW | 1 | 3X10 (FOR LAMP SOCKET) |
| 66 | XTWANE4+10RU | SCREW | 4 | 4X10 (FOR MAGNETRON) |
| 66 | XTWANE4+10RU | SCREW | 4 | 4X10 (FOR MAGNETRON) |
| 67 | XTWA3+8CF | SCREW | 1 | 3X8 (FOR INVERTER EARTH) |
| 68 | XTW3+18B | SCREW | 4 | |
| 69 | XYD4+EE12F | SCREW | 1 | 4X12 (FOR EARTH) |
| 70 | 2M236-M1G | MAGNETRON | 1 | △ |
| 71 | ANE6501-C41 | HEATER HOLDER C | 2 | |
| 72 | XWS4VL | WASHER | 2 | |
| 73 | A21446660QP | UPPER PANEL | 1 | |
| 74 | A21776660QP | WASHER | 1 | |
| 75 | A22784X00AP | UPPER HEATER PANEL | 1 | |
| 76 | A41325020AQ | PULLEY B | 1 | |
| 77 | A41575450AP | FAN BRACKET A | 1 | |
| 78 | A41585450AP | FAN BRACKET B | 1 | |
| 79 | A41635020AQ | FAN SPACER C | 1 | |
| 80 | A40086660QP | SHAFT U | 1 | |
| 81 | A630G6660QP | HEATER A | 1 | NN-C2000P MNQ/YNQ/KNQ NN-C2000W QPQ |
| 81 | A630G6660HN | HEATER A | 1 | NN-C2000P HNE/LNK/TNE/SNM/KKE |
| 81 | A630G6660JP | HEATER A | 1 | NN-C2000W JPG |
| 82 | A64175130AP | HEATER SUPPORT | 3 | |
| 82 | A64175130AP | HEATER SUPPORT | 3 | |
| 82 | A64175130AP | HEATER SUPPORT | 3 | |
| 83 | XTWANE35+14N | SCREW | 3 | 3.5X14 (FOR HEATER SUPPORT) |
| 83 | XTWANE35+14N | SCREW | 3 | 3.5X14 (FOR HEATER SUPPORT) |
| 84 | XNG4EVS | NUT | 2 | |
| 84 | XNG4EVS | NUT | 2 | |
| 85 | A41074X70QP | EXHAUST GUIDE B | 1 | |
| 85 | A41074X70QP | EXHAUST GUIDE B | 1 | |
| 86 | A01574X70HN | NAME LABEL | 1 | NN-C2000P HNE |
| 86 | A01574X70KK | NAME LABEL | 1 | NN-C2000P KKE |
| 86 | A01574X70KN | NAME LABEL | 1 | NN-C2000P KNQ |
| 86 | A01574X70LN | NAME LABEL | 1 | NN-C2000P LNK |
| 86 | A01574X70MN | NAME LABEL | 1 | NN-C2000P MNQ |
| 86 | A01574X70SN | NAME LABEL | 1 | NN-C2000P SNM |
| 86 | A01574X70TN | NAME LABEL | 1 | NN-C2000P TNE |
| 86 | A01574X70YN | NAME LABEL | 1 | NN-C2000P YNQ |
| 86 | A01574X70QP | NAME LABEL | 1 | NN-C2000P QPQ |
| 86 | A01574X70JP | NAME LABEL | 1 | NN-C2000P JPG |
| 87 | A02444X70QP | CAUTION LABEL | 1 | |
| 88 | A09254X70QP | CUSHION RUBBER C | 1 | |
| 89 | ANE0922000AQ | CUSHION RUBBER C | 1 | |

15 DOOR ASSEMBLY

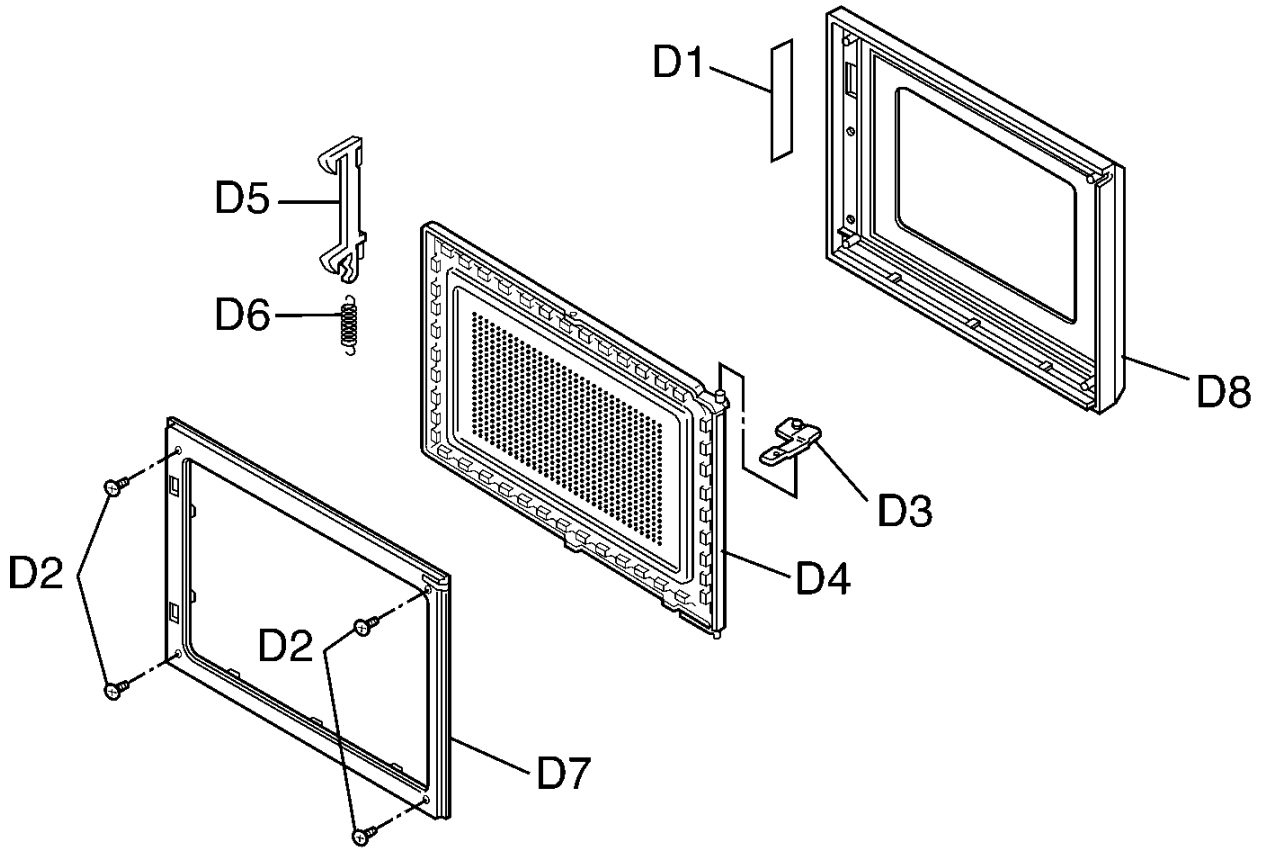


(S-4X7 QPQ)

| Ref. No. | Part No. | Part Name & Description | Pcs/ Set | Remarks |
|----------|--------------|-------------------------|----------|--|
| D1 | ANE0245X00AP | DHHS LABEL | 1 | NN-C2000P LNK |
| D1 | A01726210JP | CAUTION LABEL | 1 | NN-C2000W JPG |
| D2 | XTBANE4+12FK | SCREW | 4 | 4X12(FOR DOOR C) |
| D2 | XTBANE4+12FK | SCREW | 4 | 4X12(FOR DOOR C) |
| D3 | A300B5450AP | UPPER HINGE | 1 | △ |
| D4 | A302K6660QP | DOOR E(U) | 1 | △ |
| D5 | A30186660QP | DOOR KEY A | 1 | |
| D6 | A30214000AP | DOOR KEY SPRING | 1 | |
| D7 | A30856660QP | DOOR C | 1 | △ |
| D8 | A302A4X70GMN | DOOR A (U) | 1 | NN-C2000P HNE/LNK/MNQ/TNE/YNQ (NOTE 1) |
| D8 | A302A4X70GKN | DOOR A (U) | 1 | NN-C2000P KKE/KNQ/SNM (NOTE 1) |
| D8 | A302A4X70HQP | DOOR A (U) | 1 | NN-C2000W QPQ (NOTE 1) |

NOTE 1: Please order DHHS LABEL or CAUTION LABEL together.

16 ESCUTCHEON BASE ASSEMBLY

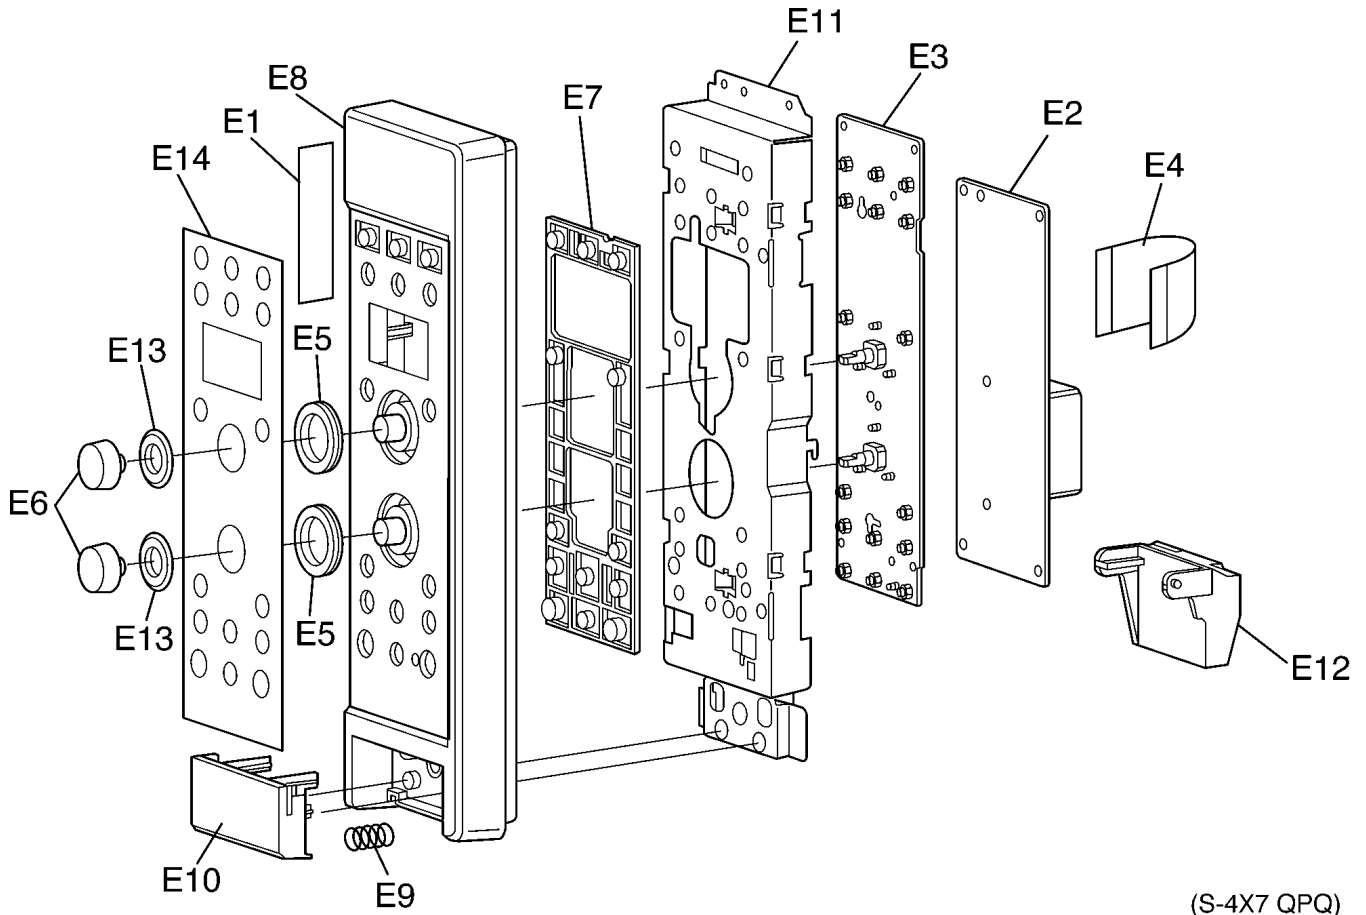


(S-4X7 QPQ)

| Ref. No. | Part No. | Part Name & Description | Pcs/Set | Remarks |
|----------|--------------|-------------------------|---------|---------------------------------|
| E1 | A02840000MK | NUMBER LABEL | 1 | NN-C2000P YNQ |
| E2 | A603Y4X70QP | PC BOARD D (U) | 1 | NN-C2000P NN-C2000W QPQ |
| E3 | A605Q4X70HN | PC BOARD F (U) | 1 | NN-C2000P HNE (W/COMPONENT) |
| E3 | A605Q4X70SN | PC BOARD F (U) | 1 | NN-C2000P KKE/SNK (W/COMPONENT) |
| E3 | A605Q4X70KN | PC BOARD F (U) | 1 | NN-C2000P KNQ (W/COMPONENT) |
| E3 | A605Q4X70LN | PC BOARD F (U) | 1 | NN-C2000P LNK (W/COMPONENT) |
| E3 | A605Q4X70MN | PC BOARD F (U) | 1 | NN-C2000P MNQ (W/COMPONENT) |
| E3 | A605Q4X70TN | PC BOARD F (U) | 1 | NN-C2000P TNE (W/COMPONENT) |
| E3 | A605Q4X70YN | PC BOARD F (U) | 1 | NN-C2000P YNQ (W/COMPONENT) |
| E3 | A605Q4X70QP | PC BOARD F (U) | 1 | NN-C2000W QPQ (W/COMPONENT) |
| E3 | A605Q4X70JP | PC BOARD F (U) | 1 | NN-C2000W JPG (W/COMPONENT) |
| E4 | A6590-3280 | FLAT CABLE | 1 | |
| E5 | A80094X70QP | INDICATOR A | 1 | |
| E5 | A80094X70QP | INDICATOR A | 1 | |
| E6 | A80204X70QP | TIMER KNOB | 2 | |
| E7 | A80244X70QP | OPERATION BUTTON | 1 | |
| E8 | A80344X70GMN | ESCUTCHEON BASE | 1 | NN-C2000P (NOTE 2) |
| E8 | A80344X70HQP | ESCUTCHEON BASE | 1 | NN-C2000W (NOTE 2) |
| E9 | ANE80378A0AG | SPRING | 1 | |
| E10 | A80724X70GMN | DOOR OPENING BUTTON | 1 | NN-C2000P |
| E10 | A80724X70HQP | DOOR OPENING BUTTON | 1 | NN-C2000W |
| E11 | A81274X70QP | BACK PANEL | 1 | |
| E12 | A82569770AP | DOOR OPENING LEVER | 1 | |
| E13 | A82874X70QP | SPACER A | 2 | |
| E13 | A82874X70QP | SPACER A | 2 | |
| E14 | A83374X70GMN | ESCUTCHEON SHEET | 1 | NN-C2000P HNE/LNK/MNQ/TNE/YNQ |
| E14 | A83374X70GKN | ESCUTCHEON SHEET | 1 | NN-C2000P KKE/KNQ/SNK |
| E14 | A83374X70HQP | ESCUTCHEON SHEET | 1 | NN-C2000W |

NOTE 2: Please order NUMBER LABEL together.


17 PACKING AND ACCESORIES

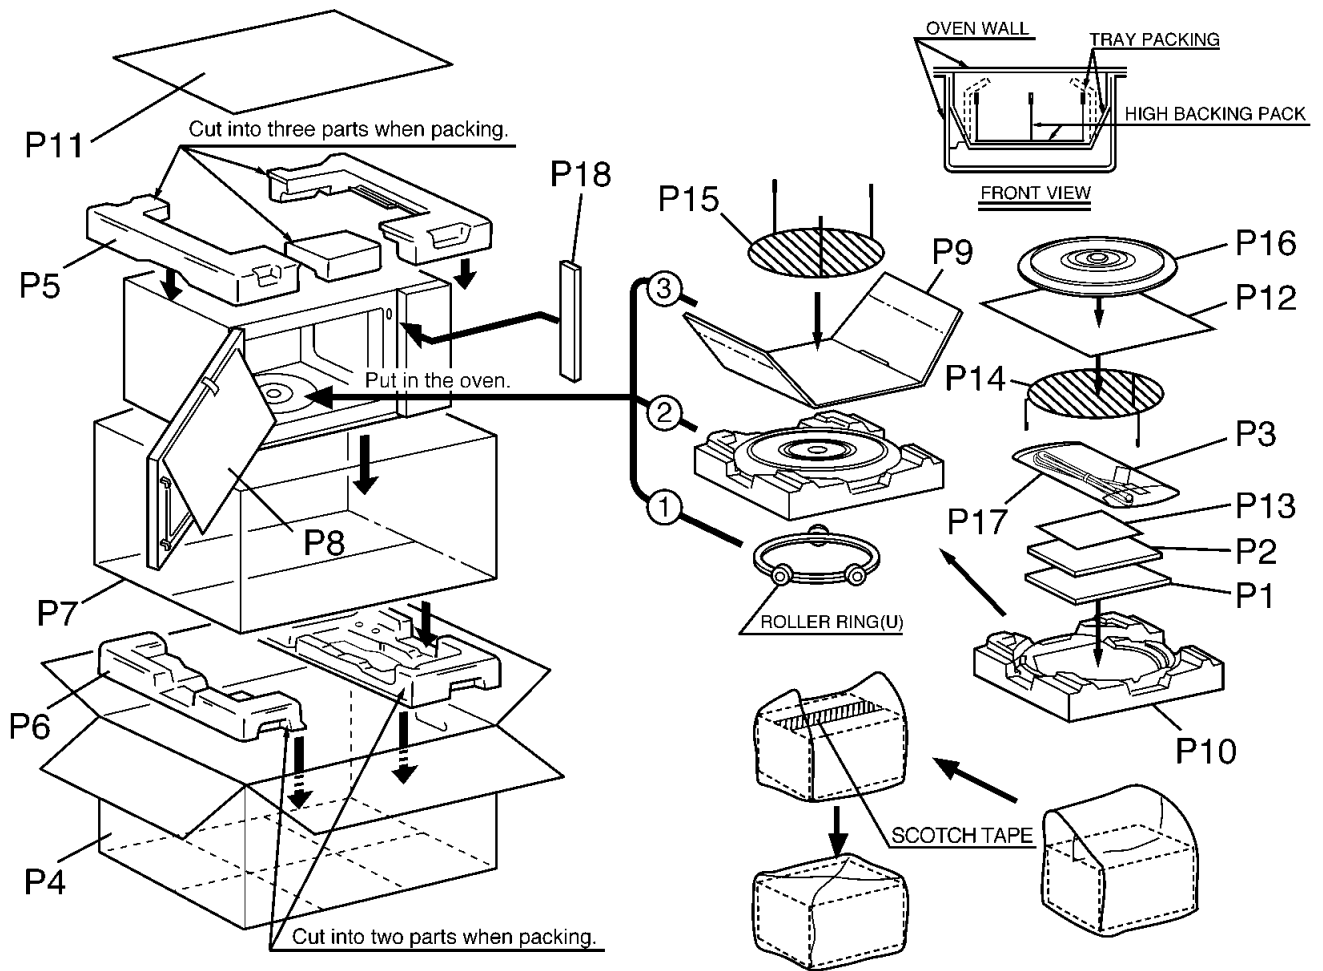

(S-4X7 QPQ)

| Ref. No. | Part No. | Part Name & Description | Pcs/ Set | Remarks |
|----------|--------------|-------------------------|----------|-------------------------------|
| P1 | A000B4X70MN | COOK BOOK | 1 | NN-C2000P HNE/LNK/MNQ/TNE/YNQ |
| P1 | A000B5820KN | COOK BOOK | 1 | NN-C2000P KKE/KNQ/SNM |
| P2 | A00034X70HN | INSTRUCTION BOOK | 1 | NN-C2000P HNE/LNK/MNQ/TNE/YNQ |
| P2 | A00034X70KN | INSTRUCTION BOOK | 1 | NN-C2000P KKE/KNQ/SNM |
| P2 | A00034X70QP | INSTRUCTION BOOK | 1 | NN-C2000W |
| P3 | A00324040XN | EARTH CAUTION LABEL | 1 | NN-C2000P TNE |
| P4 | A01024X70HMN | PACKING CASE PAPER | 1 | NN-C2000P HNE/LNK/MNQ/TNE/YNQ |
| P4 | A01024X70HKN | PACKING CASE PAPER | 1 | NN-C2000P KKE/KNQ/SNM |
| P4 | A01024X70HQF | PACKING CASE PAPER | 1 | NN-C2000W QPQ |
| P4 | A01024X70HJP | PACKING CASE PAPER | 1 | NN-C2000W JPG |
| P5 | A01046660MN | UPPER FILLER | 1 | NN-C2000P HNE/LNK/MNQ/TNE/YNQ |
| P5 | A01046660KN | UPPERFILLER | 1 | NN-C2000P KKE/KNQ/SNM |
| P5 | A01046660QP | UPPER FILLER | 1 | NN-C2000W |
| P6 | A01056660MN | LOWER FILLER | 1 | NN-C2000P HNE/LNK/MNQ/TNE/YNQ |
| P6 | A01056660KN | LOWER FILLER | 1 | NN-C2000P KKE/KNQ/SNM |
| P6 | A01056660QP | LOWER FILLER | 1 | NN-C2000W |
| P7 | A01065130AP | VINYL COVER | 1 | |
| P8 | ANE0107580AP | DOOR SHEET | 1 | |
| P9 | A01086660QP | TRAY PACKING | 1 | |
| P10 | A01136660QP | TRAY STYROL | 1 | |
| P11 | A01265820HKN | REINFORCE MATERIAL | 1 | NN-C2000P KKE/KNQ/SNM |
| P12 | ANE02072L0AP | STYROL SHEET | 1 | |
| P13 | A04454X70MN | MENU LABEL | 1 | NN-C2000P MNQ |
| P14 | A060V4X00AP | HIGH BAKING RACK | 1 | MID (50MM) |
| P15 | A060V4X00CP | HIGH BAKING RACK | 1 | HIGH (135MM) |
| P16 | A06014X70QP | COOKING TRAY | 1 | |
| P17 | A91644000XN | EARTH LEAD | 1 | NN-C2000P TNE |
| P18 | A01459770KN | DOOR SHEET B | 1 | |

18 WIRING MATERIAL

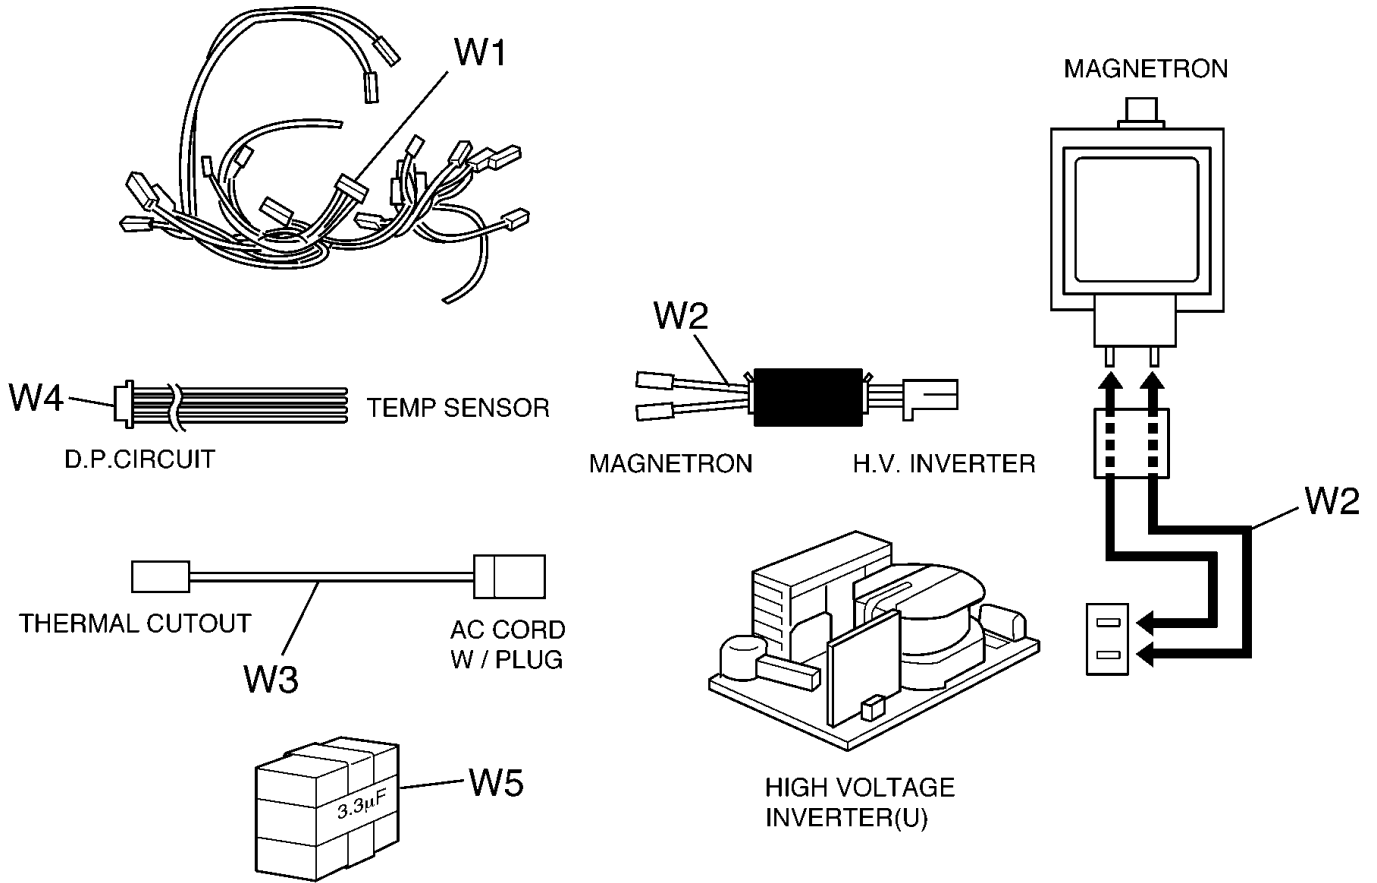

(S-4X7 QPQ)

| Ref. No. | Part No. | Part Name & Description | Pcs/ Set | Remarks |
|----------|--------------|-------------------------|----------|---------------|
| W1 | A030A4X70MN | LEAD WIRE HARNESS | 1 | NN-C2000P |
| W1 | A030A4X70QP | LEAD WIRE HARNESS | 1 | NN-C2000W |
| W2 | A030E4X00AP | LEAD WIRE | 1 | NN-C2000P |
| W2 | A030E4X00CP | LEAD WIRE | 1 | NN-C2000W |
| W3 | A03509770LN | LEAD WIRE | 1 | NN-C2000P LNK |
| W4 | A03536660QP | LEAD WIRE | 1 | |
| W5 | AECQJ5335KRP | CAPACITOR | 1 | 3.3MF |

PARTS LIST FOR MICROWAVE OVEN TRIM KITS

| Exploded View | Trim Kit Model No. | Top and Bottom Strip Ref No:1,2 | Pcs/ Set | Side Strip Ref No:3,4 | Pcs/ Set | Microwave Oven Model No. |
|---------------|--------------------|---------------------------------|--------------|-----------------------|--------------|--------------------------|
| | | NN-TK953 | A1603A000HAG | 2 | A1601A240HAP | 2 |

NOTE: The top and bottom strips have the same part number and the left and right side strips also have the same part number. These parts will be supplied on one piece per one part number.

19 REF. NO. 47 H. V. INVERTER (U)

| Ref. No. | Part No. | Part Name & Description | Pcs/ Set | Remarks |
|----------------------------|--------------|-------------------------|----------|--------------------|
| | 2SA1175TFK | TRANSISTOR SI 0.25W | 1 | |
| | 2SC2785TFK | TRANSISTOR SI 0.25W | 2 | |
| C701 | ECWF5104N300 | FILM CAPACITOR | 1 | 0.1MF 500VDC |
| C702 | ECQE2405T847 | POLYESTER CAPACITOR | 1 | 4MF 250VDC |
| C703 | ECWF5454N300 | FILM CAPACITOR | 1 | 0.45MF 500VDC |
| C704 705 | ECWH30822JUA | FILM CAPACITOR | 2 | 8200PF 3KVDC |
| CN701 | AEMXH00703G | CONNECTOR | 1 | |
| CT701 | A66904T00AP | TRANSFORMER | 1 | |
| D701 702 | A6202-4N10T | DIODE SI 0.3A | 2 | △ |
| D703 | AEDNERA3806 | DIODE SI 0.5A | 1 | ERA38-06 |
| D704 705 | AEDNERA1506 | DIODE SI 1A | 2 | ERA1506 |
| D706 | MA196-(TA5) | DIODE SI 0.1A | 1 | MA196 |
| DB701 | AESTRBV6206 | DIODE SI 15A | 1 | 15A 600V |
| DB701 | XTW3+12B | SCREW | 2 | 3X12 (FOR Q701) |
| H.S. | A66914T00AP | HEAT SINK | 1 | |
| IC702 703 | AEICP25011HL | IC | 2 | PS2501-1 HL 4P |
| IC801 | AN9DB07SB | IC | 1 | |
| L701 | A50204T00AP | COIL | 1 | |
| Q701 | AESCGT60M303 | TRANSISTOR SI 170W | 1 | |
| Q702 | AESPGT30J322 | TRANSISTOR SI 75W | 1 | GT30J322 |
| Q702 | XTN3+12B | SCREW | 1 | 3X12 (FOR Q702) |
| Q703 704 | 2SC3311AQSTA | TRANSISTOR SI | 2 | 2SC3311AQRS |
| Q705 | 2SA1309AQSTA | TRANSISTOR SI | 1 | 2SA1309AQRS |
| R701 | AERG419S107M | | 1 | |
| R715 | AERGS215J452 | RESISTOR | 1 | 4.5KΩ 15W |
| T701 | A609A4V00GP | INERTER TRANS. | 1 | P20T S296T |
| VR701 | AEVTZ6TLT102 | VARIABLE RESISTOR | 1 | 1KΩ 30% |
| ZD701 703 704 705 | AEDZ10ES2T1 | ZENNER DIODE SI | 4 | RD10ES2T1 |
| ZD702 | AESZ12JS2T1 | ZENNER DIODE SI | 1 | RD12JS2 |

20 REF NO. E2 P. C. BOARD D (U)

| Ref. No. | Part No. | Part Name & Description | Pcs/ Set | Remarks |
|---------------|--------------|---------------------------|----------|-------------|
| BZ210 | AEFB22EP20TL | BUZZER | 1 | 2.0KHZ |
| C10 | ECA1HM102E | ELECTROLYTIC CAPACITOR AL | 1 | 1000MF/50V |
| C12 13 220 | AECF50F104Z | CERAMIC CAPACITOR | 3 | 0.1MF/50V |
| C14 | ECA1HM101B | ELECTROLYTIC CAPACITOR AL | 1 | |
| C330 502 | ECBT1E103ZF5 | CERAMIC CAPACITOR | 2 | 0.01MF/25V |
| C500 | ECEA1HKA010B | ELECTROLYTIC CAPACITOR AL | 1 | 1MF/50V |
| C501 | ECSF1VE6842B | ALUMINIUM CAPACITOR | 1 | 0.68MF/35V |
| CN1 | AEMMD15509W | CONNECTOR | 1 | 9 PIN WHITE |
| CN2 | AEMMF01D05W | CONNECTOR | 1 | 5 PIN |
| CN3 | AEMXF00703B | CONNECTOR | 1 | 3 PIN BLUE |
| CN4 | AEMMF00D04W | CONNECTOR | 1 | 4 PIN |
| CN5 | AEMHLEM21S | CONNECTOR | 1 | 3 PIN RED |
| CN6 | AEMMF00703R | CONNECTOR | 1 | |
| D10 11 220 | AEDNERA1502 | DIODE SI 1A | 3 | |
| D25 | ERZV10D511CS | VARISTOR | 1 | V10511U |
| D26 27 | ERZV10D112C1 | VARISTOR | 2 | V10112U |
| D221 222 | AESS133T-77 | DIODE SI 0.1A | 2 | |
| D500 | AESM05DSMM5A | TRIAC 5A | 1 | |
| F1 | A62309770AP | FUSE 0.8A | 1 | △ |
| Q10 | A6244UE1625 | HEAT SINK | 1 | |

| Ref. No. | Part No. | Part Name & Description | Pcs/ Set | Remarks |
|---------------------------|--------------|-------------------------|----------|--------------------------|
| Q10 | XYN3+F8S6 | SCREW | 1 | 3X8 |
| Q10 | ZSD2012 | TRANSISTOR SI 2W | 1 | 2SD2012 |
| Q220 | AESAKTA200Y | TRANSISTOR SI 0.6W | 1 | |
| Q500 502 | 2SC2785TFK | TRANSISTOR SI 0.25W | 2 | 2SC2785TFEK |
| Q501 | AESC14EST | TRANSISTOR SI 0.3W | 1 | |
| Q502 | AESC23JST | TRANSISTOR SI 0.3W | 1 | |
| R10 12 210 | ERDS2TJ102T | CARBON FILM RESISTOR | 3 | 1.0K Ω 1/4W 5% |
| R13 14 15 222 | ERDS2TJ104T | CARBON FILM RESISTOR | 4 | 100K Ω 1/4W 5% |
| R211 | ERDS2TJ332T | CARBON FILM RESISTOR | 1 | 3.3K Ω 1/4W 5% |
| R220 511 | ERDS2TJ103T | CARBON FILM RESISTOR | 2 | 10K Ω 1/4W 5% |
| R221 230 | ERDS2TJ242T | CARBON FILM RESISTOR | 2 | 2.4K Ω 1/4W 5% |
| R223 224 225 226 | ERDS2TJ820T | CARBON FILM RESISTOR | 4 | 82 Ω 1/4W 5% |
| R227 228 229 | ERDS2TJ301T | CARBON FILM RESISTOR | 3 | 300 Ω 1/4W 5% |
| R330 521 | ERDS2TJ333T | CARBON FILM RESISTOR | 2 | 33K Ω 1/4W 5% |
| R500 501 502 503 | ERDS2TJ221T | CARBON FILM RESISTOR | 4 | 220 Ω 1/4W 5% |
| R504 505 | ERDS2TJ751T | CARBON FILM RESISTOR | 2 | 750 Ω 1/4W 5% |
| R506 | ERDS2TJ512T | CARBON FILM RESISTOR | 1 | 5.1K Ω 1/4W 5% |
| R507 | ERDS2TJ153T | CARBON FILM RESISTOR | 1 | 15K Ω 1/4W 5% |
| R508 | ERDS2TJ223T | CARBON FILM RESISTOR | 1 | 22K Ω 1/4W 5% |
| R509 | ERDS2TJ105T | CARBON FILM RESISTOR | 1 | 1M Ω 1/4W 5% |
| RY1 7 | AEGG5G1A18 | POWER RELAY | 2 | Δ G5G-1A- ER18 |
| RY2 5 6 | AEBGG5N1A18 | POWER RELAY | 3 | Δ |
| T10 | ETP48SFC93EP | L.V. TRANSFORMER | 1 | |
| ZD10 | AEDZ5R6ES2T1 | ZENNER DIODE SI | 1 | RD5.6ES2 |
| ZD11 | AEDZ4R7ES3T1 | ZENNER DIODE SI | 1 | RD4.7ES3 |
| ZD501 | AEDZ4R3ES3T1 | ZENNER DIODE SI | 1 | RD4.3ES3 |


21 REF NO. E3 P. C. BOARD F (U)


| Ref. No. | Part No. | Part Name & Description | Pcs/ Set | Remarks |
|--|--------------|---------------------------|----------|---|
| C11 | ECEA1CKA100B | ELECTROLYTIC CAPACITOR AL | 1 | 10MF/16V |
| C15 16 17 440 | AECU1F104Z25 | CERAMIC CAPACITOR | 4 | 0.1MF/25V |
| C40 | AECU1C101J50 | CERAMIC CAPACITOR | 1 | 0.0001MF/50V |
| C80 81 82 83 350 351 | AECU1F103Z50 | CERAMIC CAPACITOR | 6 | 0.01MF/50V |
| C320 321 | AECU1C270J50 | CERAMIC CAPACITOR | 2 | NN-C2000P TNE |
| CN7 | AEEMHLEM20R | CONNECTOR | 1 | |
| CX320 | EFOEC8004T4 | RESONATOR | 1 | NN-C2000P HNE/KKE/KNQ/LNK/MNQ/ SNM/YNQ 8MHZ |
| CX320 | AEYXAT49-8MA | RESONATOR | 1 | NN-C2000P TNE |
| D40 41 223 | AESS133T-77 | DIODE SI 0.1A | 3 | 1SS133T |
| D180 181 182 183 184 185 186 187 188 | AESQTLGE260T | LED | 9 | |

| Ref. No. | Part No. | Part Name & Description | Pcs/ Set | Remarks |
|--|--------------|-------------------------|----------|--|
| D189 | AESQSEL4414E | LED | 1 | SEL4414ETP5 |
| DISP110 | AEDDHL4X8XN | DISPLAY (LCD) | 1 | NN-C2000P HNE/LNK/MNQ/TNE/YNQ |
| DISP110 | AEDDHL4X7QP | DISPLAY (LCD) | 1 | NN-C2000P KKE/KNQ/SNM NN-C2000W QPQ/JPQ |
| HOLDER | A611A4J00XN | DISPLAY HOLDER | 1 | |
| IC1 | MN101C54CDD | IC | 1 | MN101C54C |
| IC220 | AEICU2004GR2 | IC | 1 | A2004G |
| JPR1 | ERDS2TJ103T | CARBON FILM RESISTOR | 1 | NN-C2000P HNE 10K Ω 1/4W 5% |
| JPR1 | ERDS2TJ163T | CARBON FILM RESISTOR | 1 | NN-C2000P KKE/SNM 16K Ω 1/4W 5% |
| JPR1 | ERDS2TJ303T | CARBON FILM RESISTOR | 1 | NN-C2000P KNQ 30K Ω 1/4W 5% |
| JPR1 | ERDS2TJ622T | CARBON FILM RESISTOR | 1 | NN-C2000P LNK 6.2K Ω 1/4W 5% |
| JPR1 | ERDS2TJ332T | CARBON FILM RESISTOR | 1 | NN-C2000P MNQ 3.3K Ω 1/4W 5% |
| JPR1 | ERDS2TJ152T | CARBON FILM RESISTOR | 1 | NN-C2000P TNE 1.5K Ω 1/4W 5% |
| JPR1 | ERDS2TJ683T | CARBON FILM RESISTOR | 1 | NN-C2000P JPG 68K Ω 1/4W 5% |
| Q180 183 186 | 2SD1859TV2Q | TRANSISTOR SI 1W | 3 | 2SD1859TV QR120MHZ |
| Q181 184 187 | 2SC2412KT146 | TRANSISTOR SI 0.2W | 3 | 2SC2412K180MHZ |
| Q182 185 188 | AESC43ZKE | TRANSISTOR SI 0.3W | 3 | DTC143ZKA/E23 100MHZ |
| Q221 503 | AESA14EKE | TRANSISTOR SI 0.2W | 2 | DTA114EKA/14 |
| Q440 | AESC43XKE | TRANSISTOR SI 0.3W | 1 | DTC143XKA/43100MHZ |
| R11 231 | AERJ3GSYJ104 | RESISTOR | 2 | 100K Ω 1/16W 5% |
| R40 | AERJ3GSYJ123 | RESISTOR | 1 | 12K Ω 1/16 5% |
| R41 440 | ERJ3GSYJ242 | RESISTOR | 2 | 2.4K Ω 1/16W 5% |
| R42 | AERJ3GSYJ472 | RESISTOR | 1 | 4.7K Ω 1/16W 5% |
| R43 180 182 184 | AERJ3GSYJ223 | RESISTOR | 4 | 22K Ω 1/16 5% |
| R80 81 84 85 331 442 510 | AERJ3GSYJ102 | RESISTOR | 7 | 1K Ω 1/16W 5% |
| R82 83 86 87 340 341 | AERJ3GSYJ103 | RESISTOR | 6 | 10K Ω 1/16W 5% |
| R181 | AERJ3GSYJ470 | RESISTOR | 3 | 47 Ω 1/16W 5% |
| R186 187 188 | ERDS2TJ621T | CARBON FILM RESISTOR | 3 | 620 Ω 1/4W 5% |
| R189 | ERDS2TJ331T | CARBON FILM RESISTOR | 1 | 330 Ω 1/4W 5% |
| R320 | AERJ3GSYJ000 | RESISTOR | 1 | NN-C2000P TNE 1M Ω 1/16W 5% |
| R441 | AERJ3GSYJ823 | RESISTOR | 1 | 82K Ω 1/16W 5% |
| RE80 81 | EVEGA1F2224B | ROTARY ENCODER | 2 | EVEGA1F2224B |
| SW1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 | EVQ11L05R | SWITCH | 16 | EVQ21505R |
| R183 185 | AERJ3GSYJ750 | RESISTOR | 2 | 75 Ω 1/16W 5% |

22 DIGITAL PROGRAMMER CIRCUIT

SCHEMATIC DIAGRAM

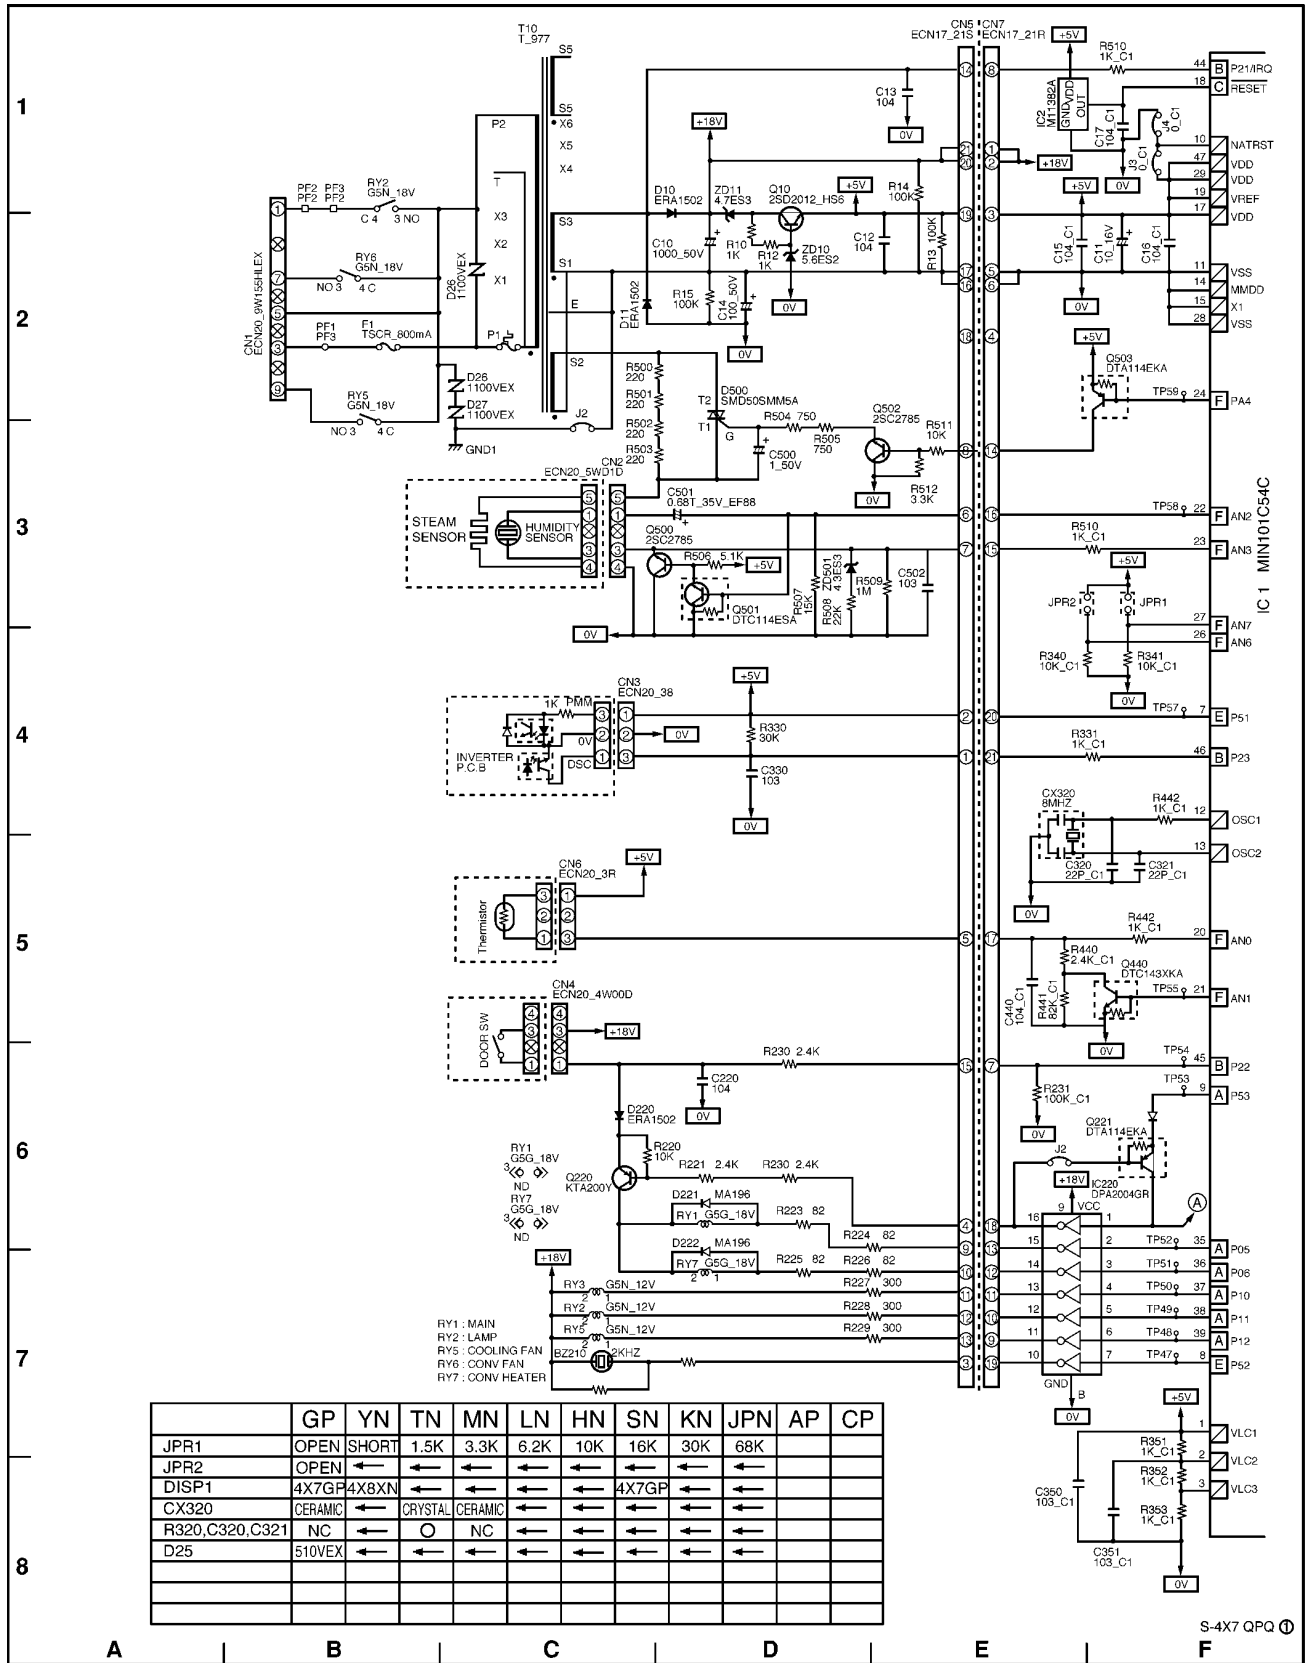

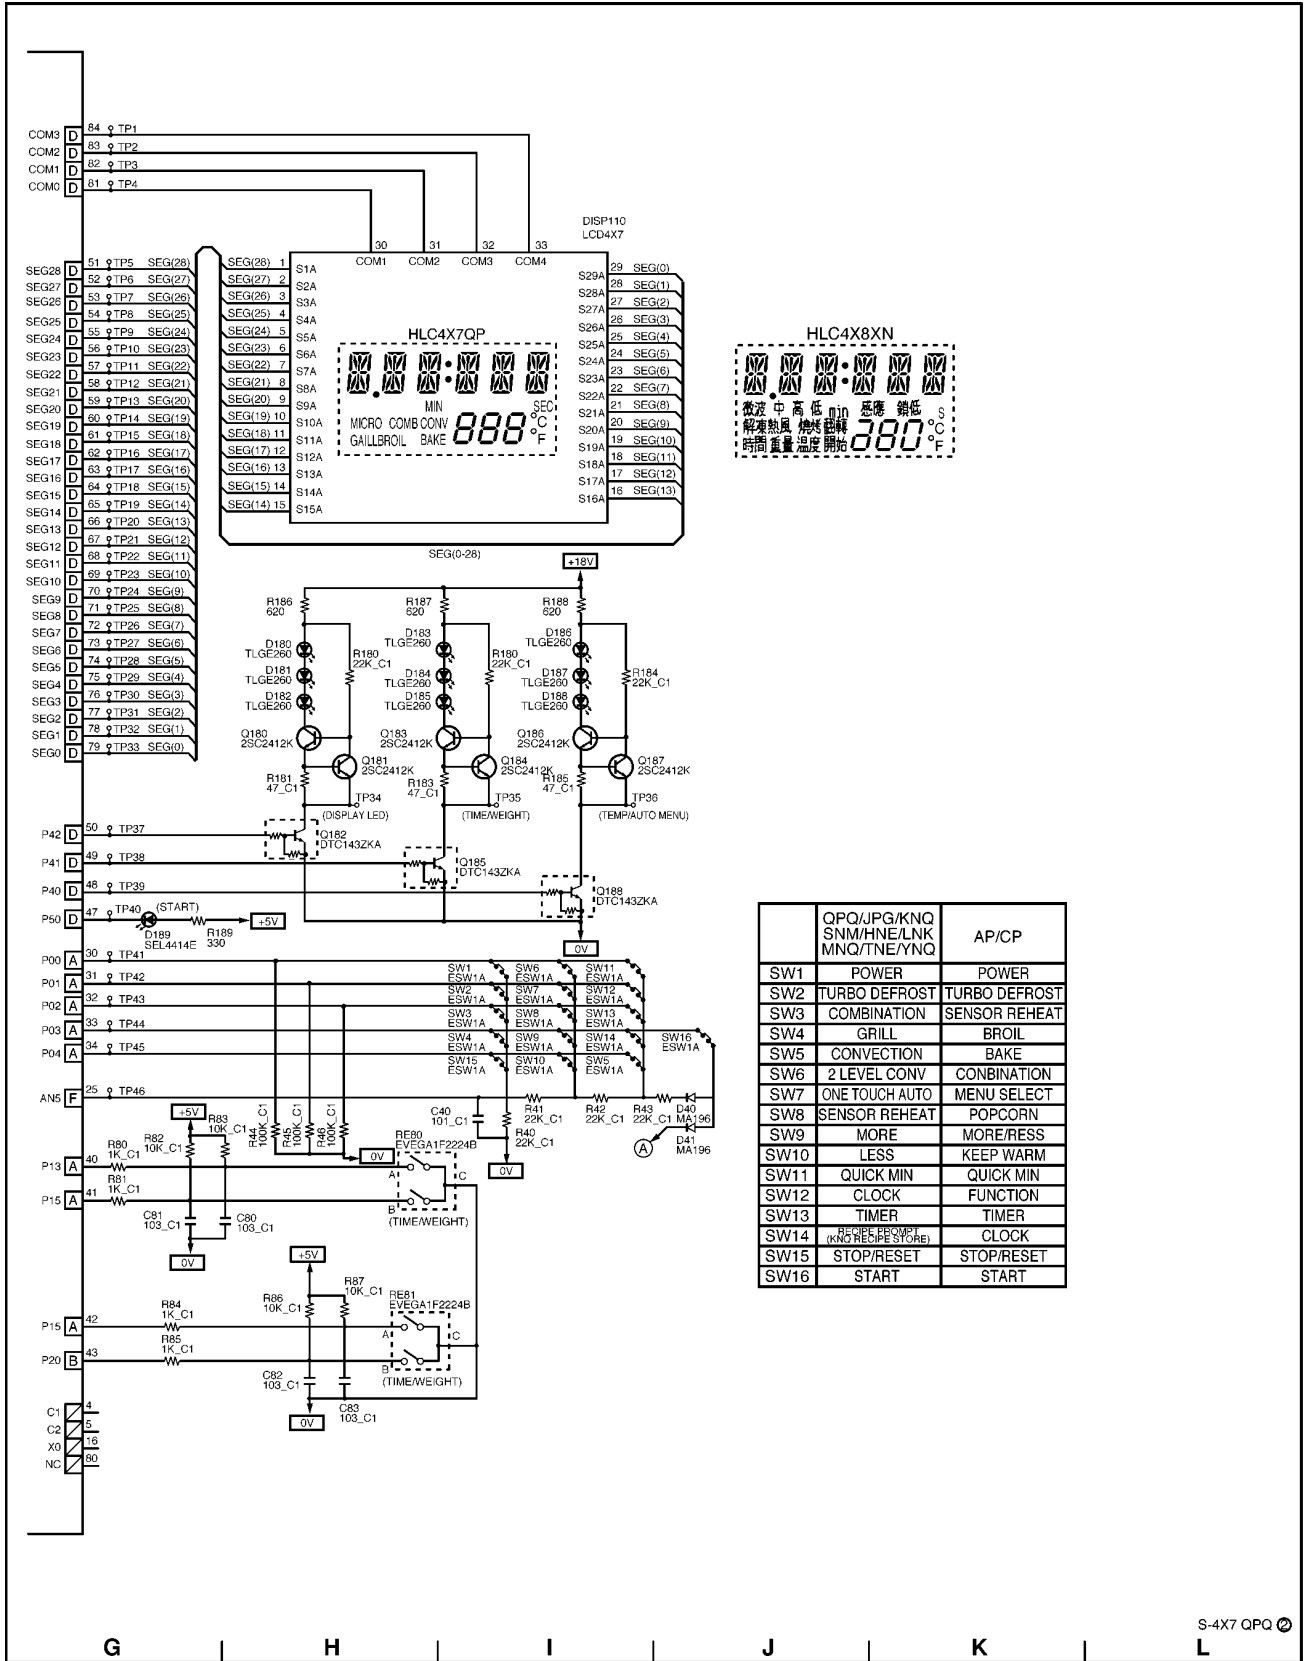

23 INVERTER CIRCUIT

SCHEMATIC DIAGRAM

